

KANJO SPOT 10W MINI MOVING HEAD



-Menu Instructions: four touch buttons: MENU, UP, DOWN, ENTER.

1 Addr	DMX Address choosing	A.001-A.511	
2 CHHY	XY direction choice	X Y	
		-X Y	
		X-Y	
		-X -Y	
3 CHNd	Channels mode	8CH	
		10CH	
4 SLNd	Master/slave mode	MasT	
		Slav	
5 Soun	Sound-activated mode	oFF	
		on	
6 LED	Digital on/off mode	oFF	
		on	
7 DISP	Positive and negative display mode	oFF	
		on	

8 REST	Reset mode	oFF	
		on	
9 nAn	Manual mode	CH01...CH08	000-255... 000-255

DMX512 Values:

8CH values:

Channels	Functions	Function details
CH1	X direction	0: off 1-255:adjust angles (540°)
CH2	Y direction	0: off 1-255:adjust angles (210°)

CH3	X、Y speed	0: the fastest; 1-255:adjust speed (from fast to slow)
CH4	Color disc	0—127: eight colors 128-255: color flow
CH5	gobos	0—63: eight fixed gobos 64—127: eight gobos flow 128—143: fully on 144-255: seven gobos shake
CH6	LED dimmer	0: off 1-255: dimmer
CH7	strobe	0-7:N/A 8—127: from slow to fast 128—135: N/A 136—255: random
CH8	Other functions	0—15: N/A 16—31: XY chop 32—47: Color disc chop 48—63: gobos chop 64—79: X、Y、Color disc, gobos chop 80—95: reset 96—255: sound-actived auto mode

10CH values:

Channels	Functions	Function details
CH1	X direction	0: off 1-255:adjust angles (540°)
CH2	X: stepping minor adjustment	0: off 1-255:adjust angles (16bit)

CH3	Y direction	0: off 1-255:adjust angles (210°)
CH4	Y: stepping minor adjustment	0: off 1-255: (16bit)
CH5	X、Y speed	0: the fastest; 1-255:adjust speed (from fast to slow)
CH6	Color disc	0–127: eight colors 128-255: color flow
CH7	gobos	0–63: eight fixed gobos 64–127: eight gobos flow 128–143: fully on 144-255: seven gobos shake
CH8	LED dimmer	0: off 1-255: dimmer
CH9	strobe	0-7:N/A 8–127: from slow to fast 128–135: N/A 136–255: random
CH10	Other functions	0–15: N/A 16–31: XY chop 32–47: Color disc chop 48–63: gobos chop 64–79: X、Y、Color disc, gobos chop 80–95: reset 96–255: sound-actived auto mode

