
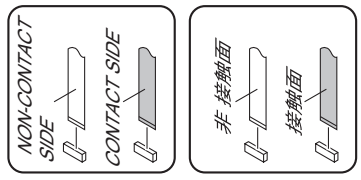


# 9.3 BOTTOM SECTION

A  
B  
C  
D  
E  
F

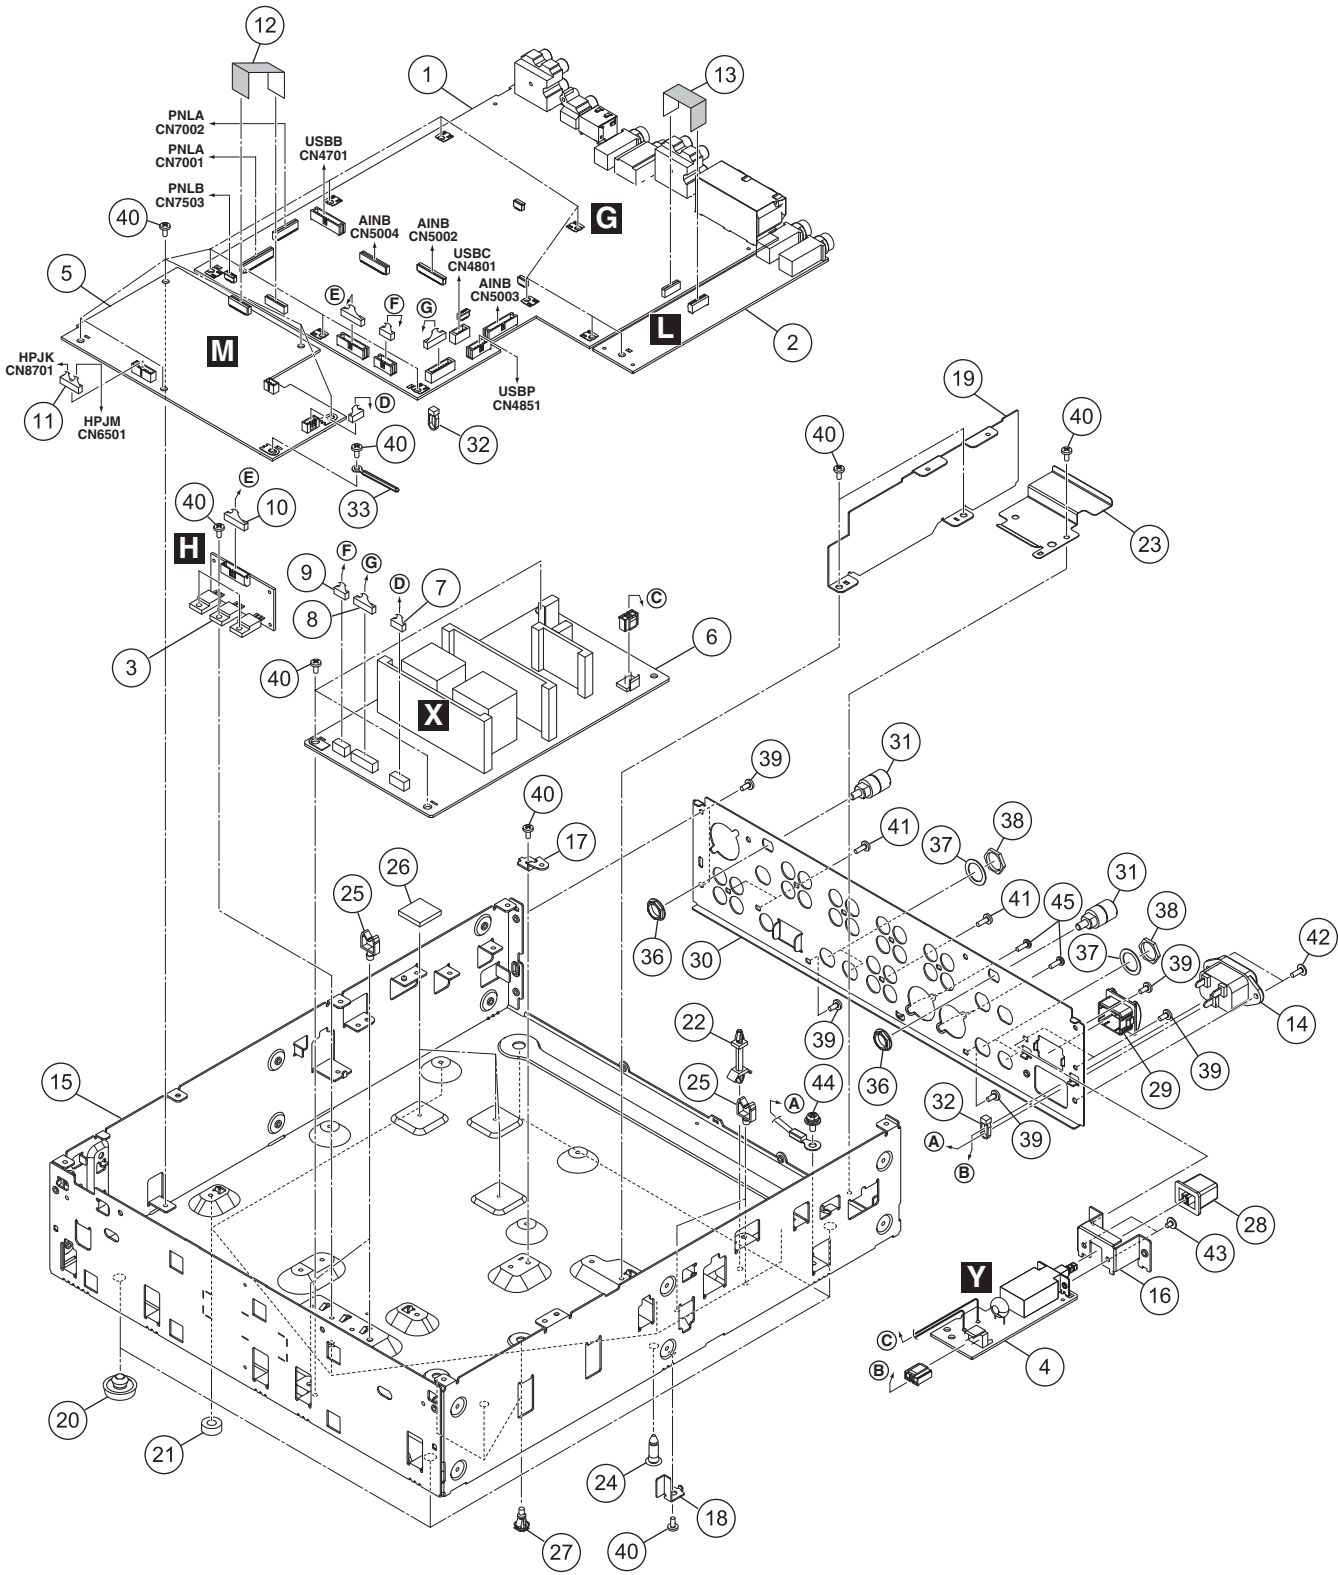

1

2

3

4

## BOTTOM SECTION PARTS LIST

<u>Mark No.</u>	<u>Description</u>	<u>Part No.</u>	
1	MAIN Assy	DWX3710	
2	SEND Assy	DWX3714	A
3	REGB Assy	DWX3721	
4	ACSW Assy	DWX3722	
5	HPPW Assy	DWX3728	
⚠	6 SW POWER SUPPLY	DWR1549	
	7 Crimp Connector	PF05PP-S25	
	8 Crimp Connector	PF08PP-S20	
	9 Connector Assy	PF04PP-S12	
	10 Crimp Connector	PF09PP-S07	
	11 Shielded Conn-Cable	DDA1061	B
	12 FFC	DDD1714	
	13 FFC	DDD1716	
⚠	14 AC Inlet	DKP3978	
	15 Chassis	DNA1457	
	16 Bracket PSW	DNF1759	
NSP	17 PCB Stay (FE)	VNE2489	
	18 Stay	DNF1950	
	19 Shield Plate	DNF1959	
	20 Foot (Rubber)	REC-434	C
NSP	21 Spacer	AEB7092	
NSP	22 PCB Spacer	AEC1446	
	23 Sheet	DEC3617	
	24 PCB Holder	PNW2029	
	25 Holder	VEC1355	
	26 Sheet	DEC3618	
	27 Spacer	DEC3636	
	28 Power Knob	DAC2306	
	29 Power Knob Guard	DNK4534	D
	30 Rear Panel	DNC2119	
	31 Earth Terminal	DKE1019	
	32 Cable Tie	ZCA-SKB90BK	
	33 Cord Clamper (Steel)	RNH-184	
	34 •••••		
	35 •••••		
	36 Flange Nut M9	DBN1008	
	37 Washer	DEC2920	
	38 Nut	NKX2FTC	E
	39 Screw	BBZ30P060FTB	
	40 Screw	BBZ30P060FTC	
	41 Screw	BPZ30P080FTB	
	42 Screw	IBZ30P080FTB	
	43 Screw	IMZ30P040FTC	
	44 Screw	PMH40P080FTC	
	45 Screw	PPZ30P080FTB	