


# 9. EXPLODED VIEWS AND PARTS LIST

NOTES: ● Parts marked by "NSP" are generally unavailable because they are not in our Master Spare Parts List.

- The  $\triangle$  mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.
- Screws adjacent to  $\nabla$  mark on product are used for disassembly.
- For the applying amount of lubricants or glue, follow the instructions in this manual. (In the case of no amount instructions, apply as you think it appropriate.)

## 9.1 PACKING SECTION

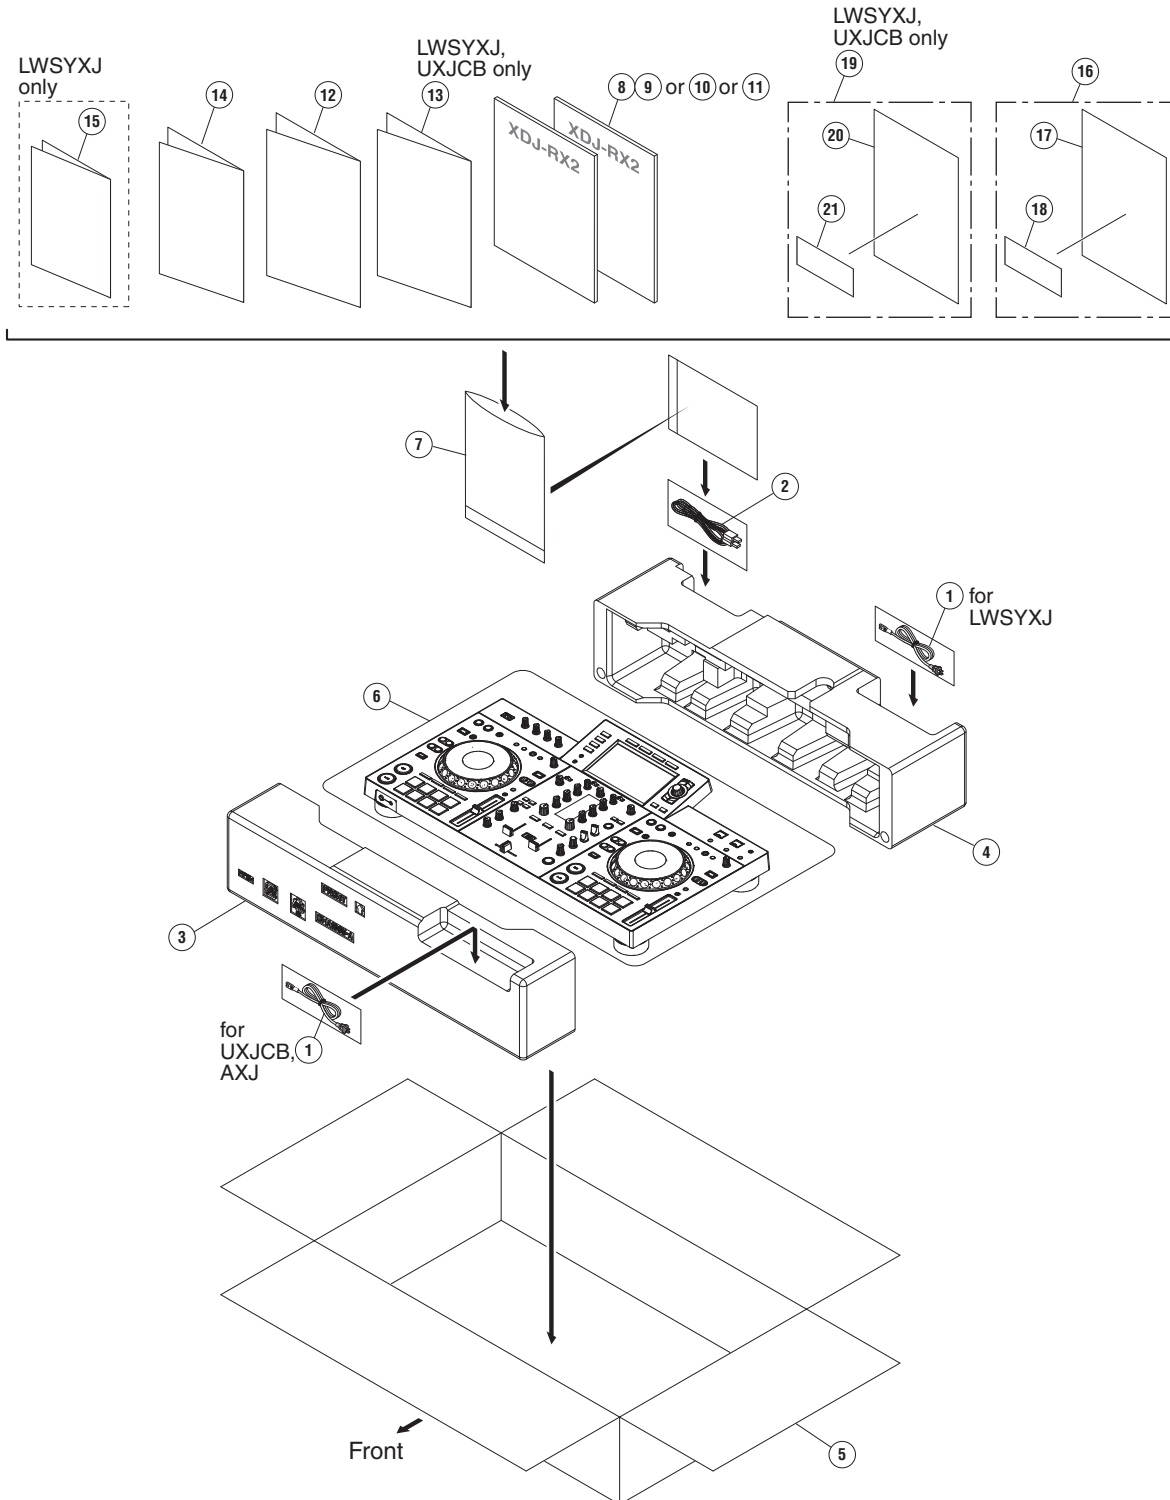

**(1) PACKING SECTION PARTS LIST**

<u>Mark No.</u>	<u>Description</u>	<u>Part No.</u>	<u>Mark No.</u>	<u>Description</u>	<u>Part No.</u>
⚠	1 Power Cord	See Contrast table (2)	10	Operating Instructions (Quick Start Guide)	See Contrast table (2)
	2 USB Cable	DDE1140			
	3 Packing Pad	DHA1965	11	Operating Instructions (Quick Start Guide)	See Contrast table (2)
	4 Packing Pad	DHA1966	12	Software License Notice	See Contrast table (2)
	5 Packing Case	See Contrast table (2)			
	6 Mirror Mat (1200 * 1000)	DHL1169	13	Software License Notice	See Contrast table (2)
NSP	7 Polyethylene Bag	AHG7117	NSP 14	Leaflet	See Contrast table (2)
	8 Operating Instructions (Quick Start Guide)	See Contrast table (2)	NSP 15	Warranty	See Contrast table (2)
	9 Operating Instructions (Quick Start Guide)	See Contrast table (2)	NSP 16	1..License Key Card Assy	DEA1046
			NSP 17	2..Leaflet	DRM1410
			NSP 18	2..rekordbox dj License Key Card	DXA2304
			NSP 19	1..License Key Card Assy	See Contrast table (2)
			NSP 20	2..Leaflet	See Contrast table (2)
			NSP 21	2..License Key Label Assy	See Contrast table (2)

**(2) CONTRAST TABLE**

XDJ-RX2/LWSYXJ, UXJCB and AXJ are constructed the same except for the following:

Mark	No.	Symbol and Description	XDJ-RX2 /LWSYXJ	XDJ-RX2 /UXJCB	XDJ-RX2 /AXJ
⚠	1	Power Cord	ADG1244	DDG1108	DDG1114
	5	Packing Case	DHG3568	DHG3569	DHG3570
	8	Operating Instructions (Quick Start Guide)(En, Fr, De, It)	DRH1448	Not used	Not used
	9	Operating Instructions (Quick Start Guide)(NI, Es, Pt, Ru)	DRH1449	Not used	Not used
	10	Operating Instructions (Quick Start Guide)(En)	Not used	DRH1447	Not used
	11	Operating Instructions (Quick Start Guide)(Zhcn)	Not used	Not used	DRH1450
	12	Software License Notice	DRH1451	DRH1451	DRH1453
	13	Software License Notice	DRH1452	DRH1452	Not used
NSP	14	Leaflet	DRH1431	DRH1431	DRH1432
NSP	15	Warranty	DRY1270	Not used	Not used
NSP	19	1..License Key Card Assy	DEA1048	DEA1048	Not used
NSP	20	2..Leaflet	DRM1415	DRM1415	Not used
NSP	21	2..License Key Label Assy	DXA2331	DXA2331	Not used