

9.7 JOG DIAL SECTION



1

2


3

4

A • Bottom view

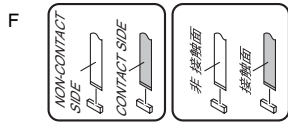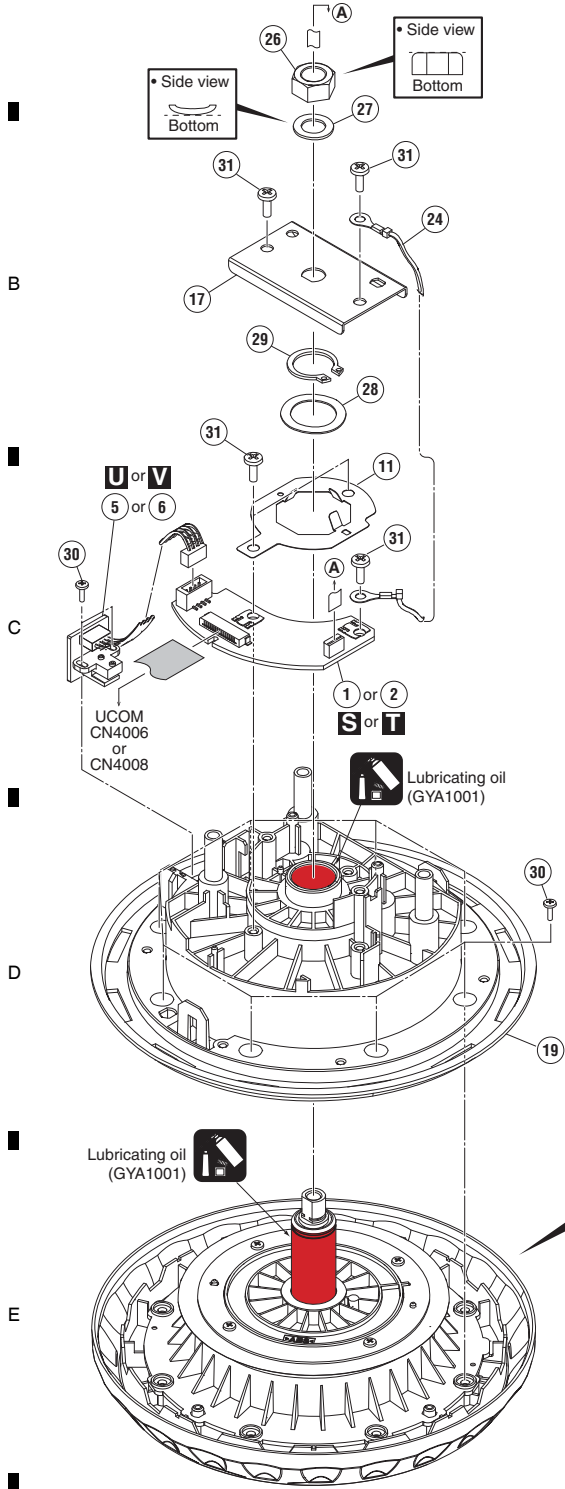

• Top view

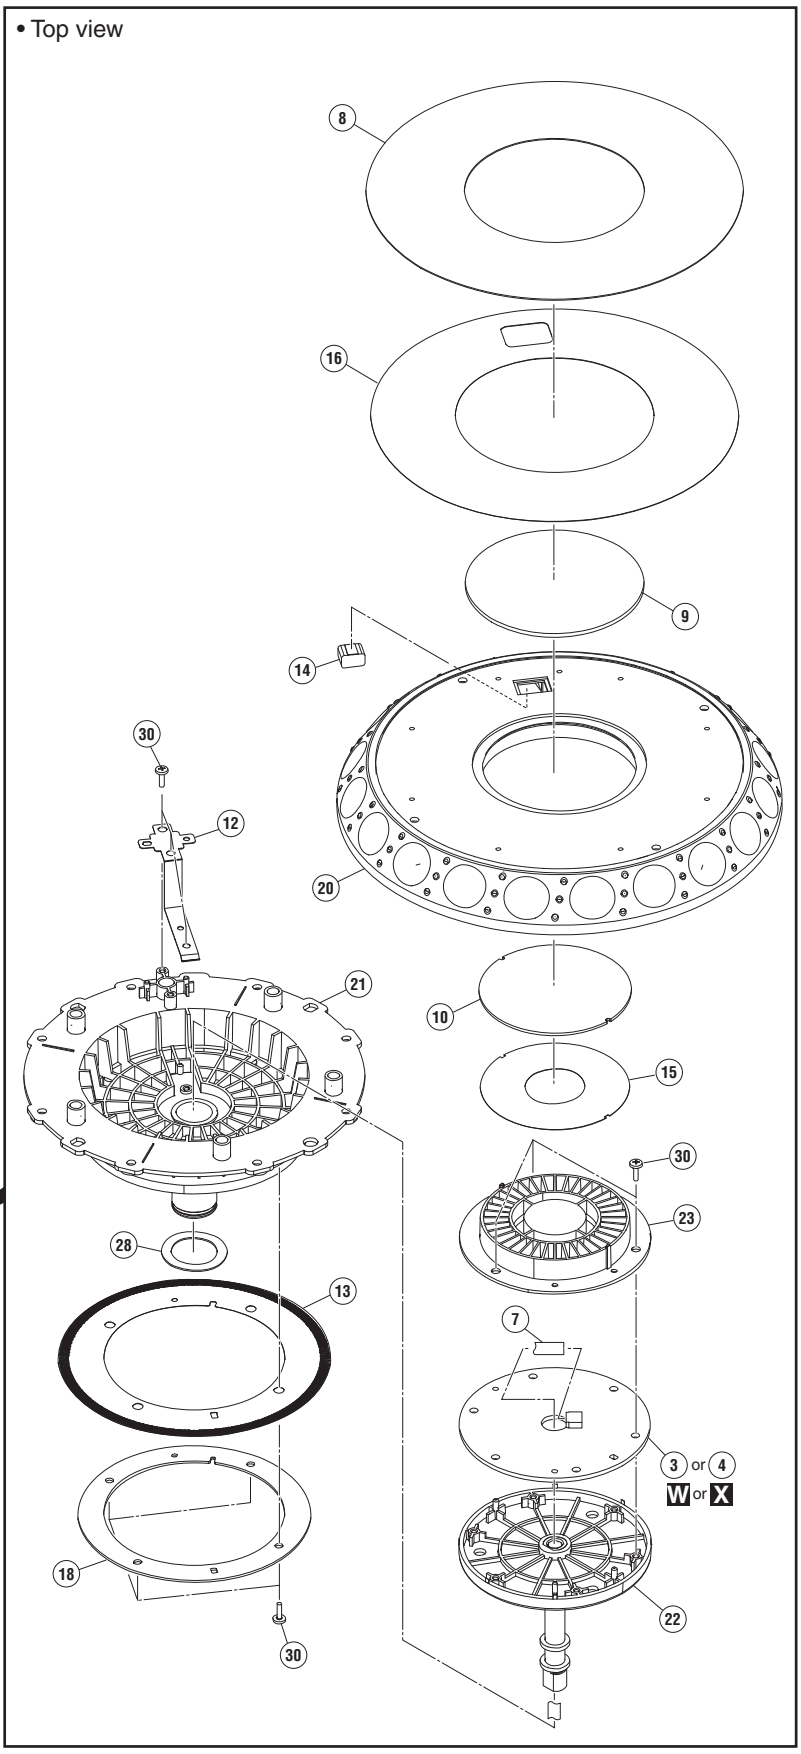

1

2

3

4

JOG DIAL SECTION PARTS LIST

<u>Mark No.</u>	<u>Description</u>	<u>Part No.</u>	
1	JOGT1 Assy	DWX4043	
2	JOGT2 Assy	DWX4044	A
3	JLED1 Assy	DWX4041	
4	JLED2 Assy	DWX4042	
5	JOG1 Assy	DWX4064	
6	JOG2 Assy	DWX4065	
7	FFC/6P	DDD1690	
8	Plate	DAH3167	
9	Window/JOG	DAH3003	
10	Window	DAH3004	
11	Leaf Spring/1	DBK1383	B
12	Leaf Spring/2	DBK1384	
13	Slit/JOG	DEC3515	
14	Gasket/JOG	DEC3562	
15	Diffuser/LED	DEC3575	
16	DS Tape/JOG	DEH1058	
17	Stay/LED	DNH3167	
18	Bracket/SLT	DNH3168	
19	Holder	DNK6741	
20	JOG Dial	DNK6709	C
21	JOG Dial/IN	DNK6373	
22	Holder/LED	DNK6374	
23	Spacer/LED	DNK6375	
24	Earth Lead Unit	DE005VC0	
25	•••••		
26	Nut	NA80FTC	
27	Spring Washer	WN80FTC	
28	Washer	WA154D225D050	
29	Washer	YC150FAC	D
30	Screw	BPZ20P060FTC	
31	Screw	BPZ30P080FNI	