


# 9. EXPLODED VIEWS AND PARTS LIST

NOTES: ● Parts marked by "NSP" are generally unavailable because they are not in our Master Spare Parts List.

- The  $\triangle$  mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.
- Screws adjacent to  $\nabla$  mark on product are used for disassembly.
- For the applying amount of lubricants or glue, follow the instructions in this manual. (In the case of no amount instructions, apply as you think it appropriate.)

## 9.1 PACKING SECTION

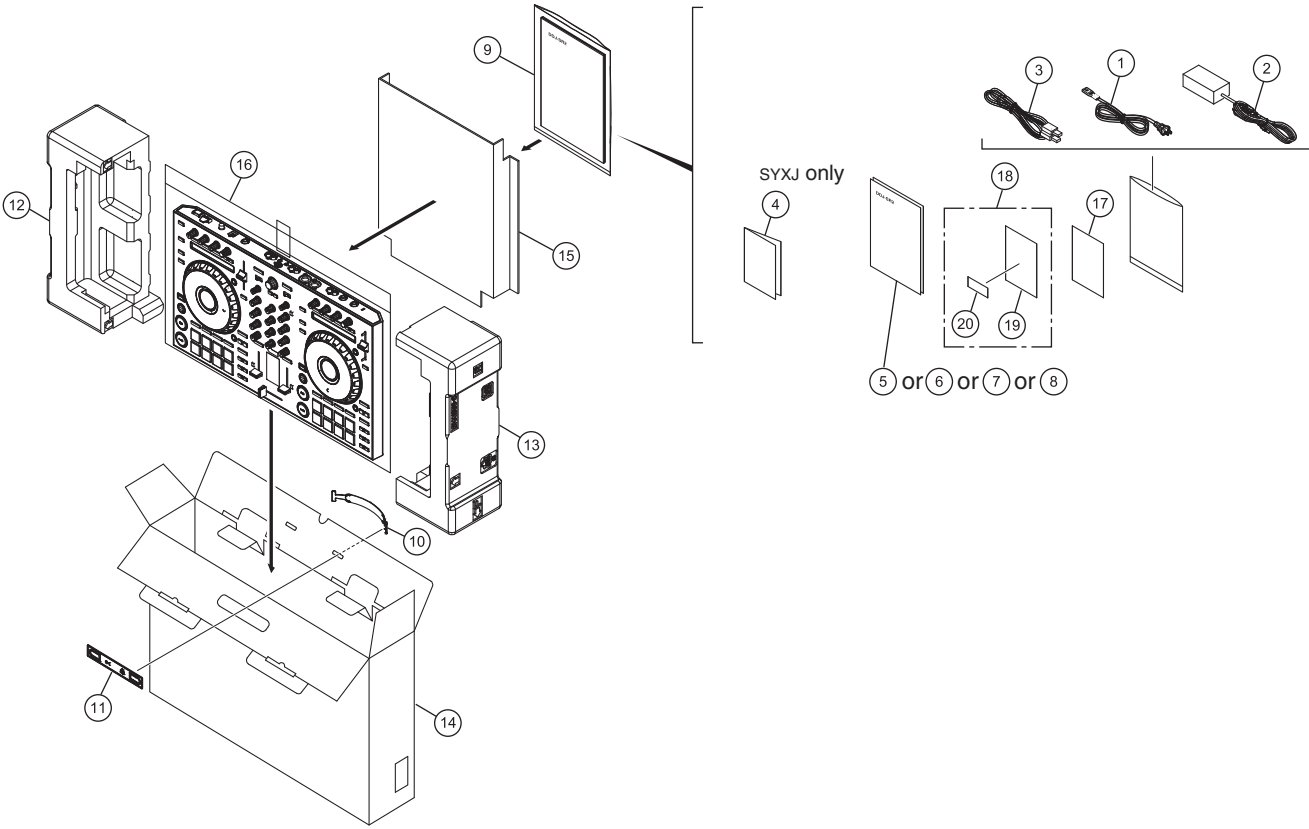

**(1) PACKING SECTION PARTS LIST**

<u>Mark No.</u>	<u>Description</u>	<u>Part No.</u>	<u>Mark No.</u>	<u>Description</u>	<u>Part No.</u>
⚠	1 Power Cord	See Contrast table (2)	NSP 9	Polyethylene Bag	AHG7117
⚠	2 AC Adapter	See Contrast table (2)	10	Handle	DEC3709
	3 USB Cable	DDE1128	11	Spacer	DEC3710
NSP	4 Warranty	See Contrast table (2)	12	Packing Pad	DHA1955
	5 Operating Instructions (Quick Start Guide)	See Contrast table (2)	13	Packing Pad	DHA1956
	6 Operating Instructions (Quick Start Guide)	See Contrast table (2)	14	Packing Case	See Contrast table (2)
	7 Operating Instructions (Quick Start Guide)	See Contrast table (2)	15	Partition	DHC1095
	8 Operating Instructions (Quick Start Guide)	See Contrast table (2)	16	Packing Sheet	RHC1023
			NSP 17	Leaflet	See Contrast table (2)
			NSP 18	Serato DJ EXPANSION PACK VOUCHER	DEA1067
			NSP 19	Leaflet	DRM1421
			NSP 20	Voucher Code Label Assy	DXA2343

**(2) CONTRAST TABLE**

DDJ-SR2/SYXJ, UXJCB, XJCN and FWLPWXJ are constructed the same except for the following:

Mark	No.	Symbol and Description	DDJ-SR2 /SYXJ	DDJ-SR2 /UXJCB	DDJ-SR2 /XJCN	DDJ-SR2 /FWLPWXJ
⚠	1	Power Cord	ADG1154	XDG3052	ADG7079	ADG1154
⚠	2	AC Adapter	DWR1571	DWR1571	DWR1551	DWR1551
NSP	4	Warranty	DRY1270	Not used	Not used	Not used
	5	Operating Instructions (Quick Start Guide) (En, Fr, De, It, Ne, Es, Pt, Ru)	DRH1462	Not used	Not used	Not used
	6	Operating Instructions (Quick Start Guide)(En)	Not used	DRH1463	Not used	Not used
	7	Operating Instructions (Quick Start Guide)(Zhc)	Not used	Not used	DRH1465	Not used
	8	Operating Instructions (Quick Start Guide)(En, Es)	Not used	Not used	Not used	DRH1466
	14	Packing Case	DHG3594	DHG3596	DHG3598	DHG3595
NSP	17	Leaflet	DRH1431	DRH1431	DRH1432	DRH1431