


# 9. EXPLODED VIEWS AND PARTS LIST

- NOTES:
- Parts marked by "NSP" are generally unavailable because they are not in our Master Spare Parts List.
  - The  $\triangle$  mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.
  - Screws adjacent to  $\nabla$  mark on product are used for disassembly.
  - For the applying amount of lubricants or glue, follow the instructions in this manual. (In the case of no amount instructions, apply as you think it appropriate.)

## 9.1 PACKING SECTION

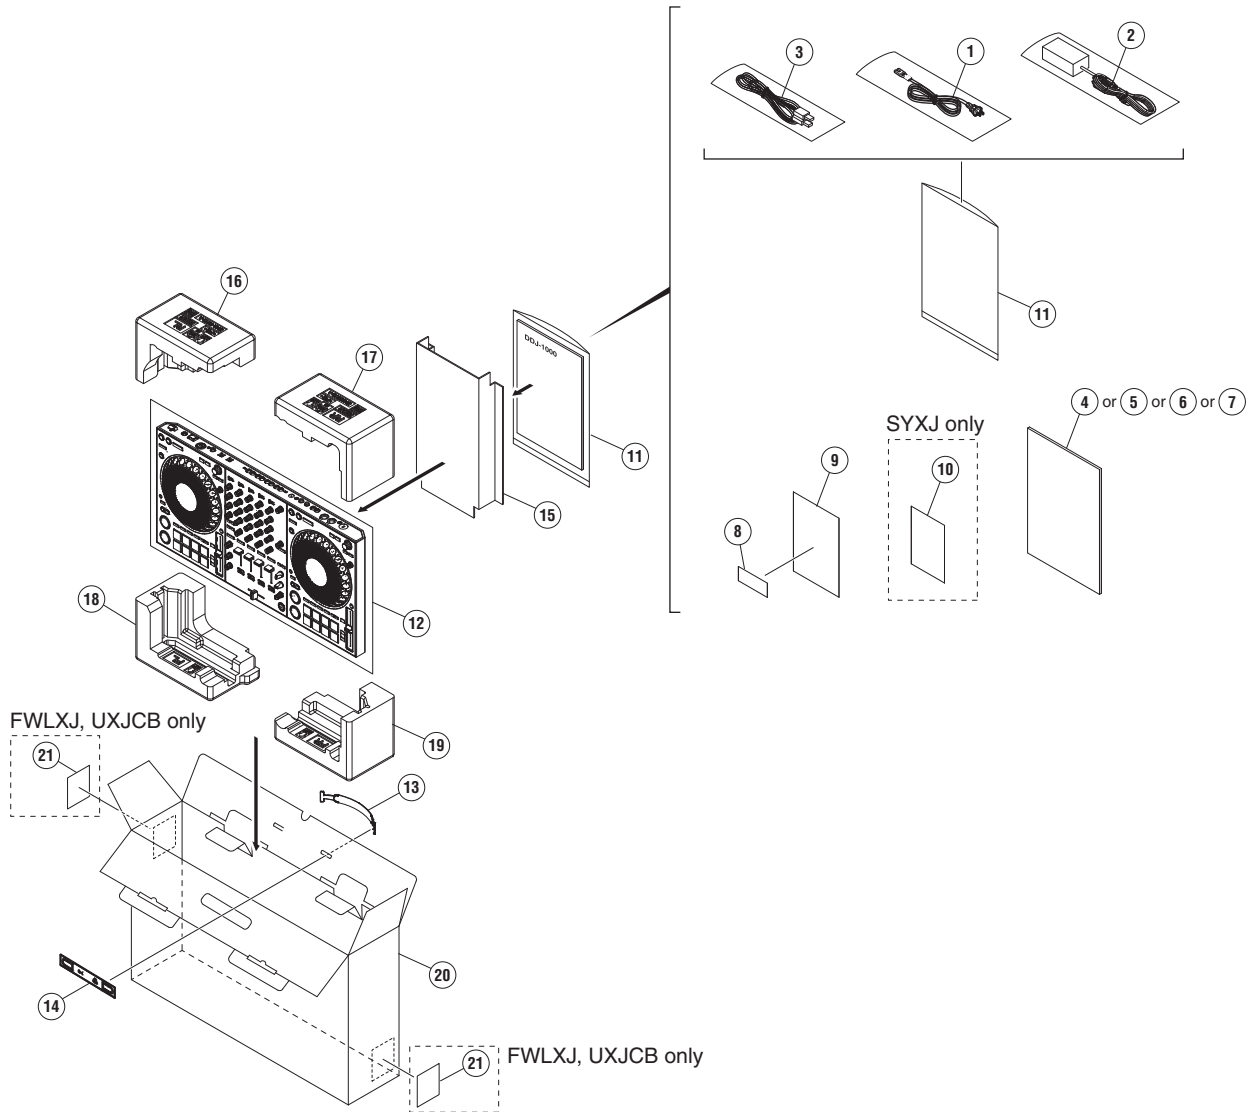

1 2 3 4

**(1) PACKING SECTION PARTS LIST**

<u>Mark No.</u>	<u>Description</u>	<u>Part No.</u>	<u>Mark No.</u>	<u>Description</u>	<u>Part No.</u>
⚠ 1	Power Cord	See Contrast table (2)	NSP 8	License key label	See Contrast table (2)
⚠ 2	AC Adapter	DWR1577 or DWR1574	NSP 9	Leaflet	See Contrast table (2)
3	USB Cable	DDE1128	NSP 10	Warranty	See Contrast table (2)
4	Operating Instructions (Quick Start Guide)	See Contrast table (2)	NSP 11	Polyethylene Bag	AHG7117
			12	Mirror Mat (1200*1000)	DHL1169
5	Operating Instructions (Quick Start Guide)	See Contrast table (2)	13	Handle	DEC3783
6	Operating Instructions (Quick Start Guide)	See Contrast table (2)	14	Spacer	DEC3784
7	Operating Instructions (Quick Start Guide)	See Contrast table (2)	15	Partition	DHC1101
			16	Packing Pad	DHA1972
			17	Packing Pad	DHA1973
			18	Packing Pad	DHA1974
			19	Packing Pad	DHA1975
			20	Packing Case	See Contrast table (2)
			21	Label	See Contrast table (2)

**(2) CONTRAST TABLE**

DDJ-1000SRT/FWLXJ, SYXJ, UXJCB, XJCN and DDJ-1000SRT-W/UXJ are constructed the same except for the following:

Mark	No.	Symbol and Description	DDJ-1000SRT /FWLXJ	DDJ-1000SRT /SYXJ	DDJ-1000SRT /UXJCB	DDJ-1000SRT /XJCN	DDJ-1000SRT-W /UXJ
⚠	1	Power Cord	ADG1154	ADG1154	XDG3052	ADG7079	XDG3052
	4	Operating Instructions (Quick Start Guide)(En, Es)	DRH1561	Not used	Not used	Not used	Not used
	5	Operating Instructions (Quick Start Guide) (En, Fr, De, It, NI, Es, Pt, Ru)	Not used	DRH1559	Not used	Not used	Not used
	6	Operating Instructions (Quick Start Guide)(En)	Not used	Not used	DRH1560	Not used	DRH1560
	7	Operating Instructions (Quick Start Guide)(Zhcn)	Not used	Not used	Not used	DRH1563	Not used
	NSP 8	Serato Pitch'n Time DJ license key label	DXA2343*	DXA2343*	DXA2343*	DXA2343*	Not used
	NSP 8	Serato DJ Suite license key label	Not used	Not used	Not used	Not used	DXA2392
NSP 9	Serato Pitch'n Time DJ Leaflet	DRM1434*	DRM1434*	DRM1434*	DRM1434*	Not used	
NSP 9	Serato DJ Suite Leaflet	Not used	Not used	Not used	Not used	DRM1435	
NSP 10	Warranty	Not used	DRY1270	Not used	Not used	Not used	
NSP	20	Packing Case	DHG3716	DHG3716	DHG3716	DHG3722	DHG3743
	21	Label	DRW2799	Not used	DRW2798	Not used	Not used

\*DXA2392 and DRM1435 are bundled in substitution for these parts in a first limited model.

90

DDJ-1000SRT

1 2 3 4