


Effect Unit Installation Examples

By cutting the included holding pad to match the shape of the products that you want to install, you can hide the cabling and create a clean layout.

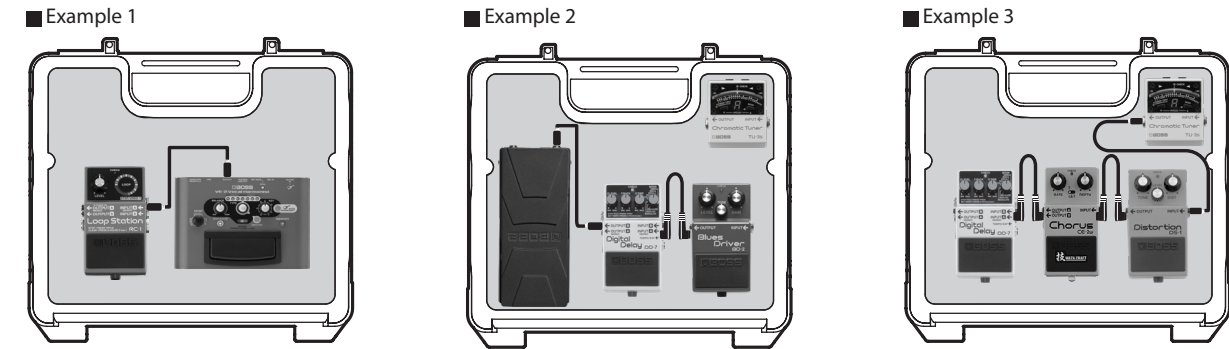

For details on the BCB-30X, refer to the Boss website.

<https://www.boss.info/global/products/bcb-30x/>



For BOSS cables, refer to the BOSS website (Accessories).

https://www.boss.info/global/categories/accessories/boss_cables/




Do It Yourself 1 (Cutting the Holding Pad)

When installing stompboxes, you can save layout time by using the existing pre-cuts in the holding pad to remove unneeded portions.


The cutouts at the left and right of the holding pad indicate the positions that are above the cable guides (places to conceal long cables) when it is placed in the case. Use these cutouts when deciding where to position your effect units, and cut the holding pad so that cables can be accommodated neatly when the effect units are installed.

- * If you use a knife to cut the holding pad, take care not to injure yourself.
- * When cutting the cutouts, take care not to damage nearby equipment with the knife.

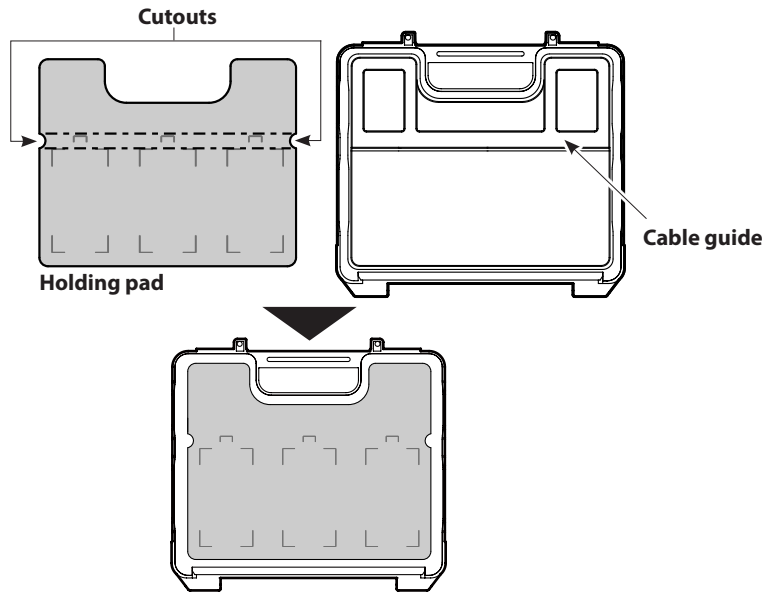


Do It Yourself 2 (Keeping the Cables Neat)

If the power supply parallel cable and long patch cables are aligned with the cable guide, the cables can be managed neatly.

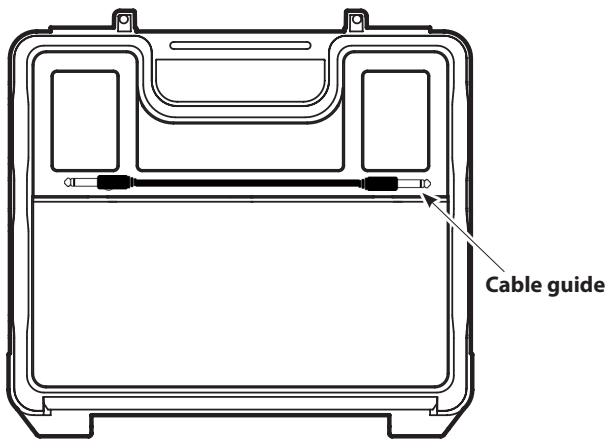


MEMO

To detach the lid, lift it to the position shown in the illustration, and then press in the direction of the arrow.

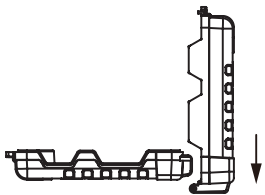

Making Connections

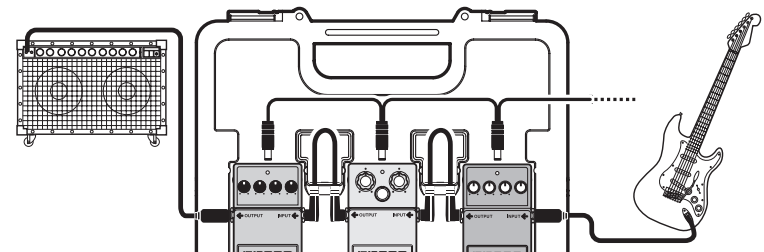

- * To prevent malfunctions or speaker damage, be sure to minimize the volume of all devices and power them off before you make connections.
- * After you have made connections correctly, you must observe the following procedure when turning on the power Malfunctions or speaker damage might occur if you fail to observe the correct order.
When turning the power on: Power-on the amp last.
When turning the power off: Power-off the amp first.

Main Specifications

Dimensions	330 (W) x 307 (D) x 100 (H) mm 13 (W) x 12-1/8 (D) x 3-15/16 (H) inches
Inside dimensions	66 (H) mm 2-5/8 (H) inches
Weight	1.3 kg 2 lbs 14 oz
	4-pin parallel DC cable x 1
Accessories	Pre-cut insert pad (thickness: 10 mm) x 1 Owner's Manual
Option (sold separately)	AC adaptor: PSA series Pre-cut insert pad (thickness: 10 mm)

* This document explains the specifications of the product at the time that the document was issued. For the latest information, refer to the Roland website.

USING THE UNIT SAFELY

INSTRUCTIONS FOR THE PREVENTION OF FIRE, ELECTRIC SHOCK, OR INJURY TO PERSONS		
About ⚠ WARNING and ⚠ CAUTION Notices		
⚠ WARNING	Used for instructions intended to alert the user to the risk of death or severe injury should the unit be used improperly.	About the Symbols The ⚠ symbol alerts the user to important instructions or warnings. The specific meaning of the symbol is determined by the design contained within the triangle. In the case of the symbol at left, it is used for general cautions, warnings, or alerts to danger. The ⚡ symbol alerts the user to items that must never be carried out (are forbidden). The specific thing that must not be done is indicated by the design contained within the circle. In the case of the symbol at left, it means that the unit must never be disassembled. The ⚡ symbol alerts the user to things that must be carried out. The specific thing that must be done is indicated by the design contained within the circle. In the case of the symbol at left, it means that the power-cord plug must be unplugged from the outlet.
⚠ CAUTION	Used for instructions intended to alert the user to the risk of injury or material damage should the unit be used improperly. * Material damage refers to damage or other adverse effects caused with respect to the home and all its furnishings, as well to domestic animals or pets.	

ALWAYS OBSERVE THE FOLLOWING

⚠ WARNING Do not disassemble or modify by yourself Do not carry out anything unless you are instructed to do so in the owner's manual. Otherwise, you risk causing malfunction. Do not repair or replace parts by yourself Be sure to contact your dealer, a Roland service center, or an official Roland dealer. For a list of Roland service centers and official Roland dealers, refer to the Roland website. Do not place in an unstable location Otherwise, you risk injury as the result of the unit toppling over or dropping down.	⚠ WARNING Do not use or store in the following types of locations • Subject to temperature extremes (e.g., direct sunlight in an enclosed vehicle, near a heating duct, on top of heat-generating equipment); or are • Damp (e.g., baths, washrooms, on wet floors); or are • Exposed to steam or smoke; or are • Subject to salt exposure; or are • Exposed to rain; or are • Dusty or sandy; or are • Subject to high levels of vibration and shakiness; or are • Placed in a poorly ventilated location. Be cautious to protect children from injury Always make sure that an adult is on hand to provide supervision and guidance when using the unit in places where children are present, or when a child will be using the unit.	⚠ WARNING Do not drop or subject to strong impact Otherwise, you risk causing damage or malfunction. ⚠ CAUTION Avoid climbing on top of the unit, or placing heavy objects on it Otherwise, you risk injury as the result of the unit toppling over or dropping down. Take care so as not to get fingers pinched When handling the following moving parts, take care so as not to get fingers, toes, etc., pinched. Whenever a child uses the unit, an adult should be on hand to provide supervision and guidance. • Lid • If you use a knife to cut the holding pad, take care not to injure yourself. • When trimming the cutouts, take care that the knife does not damage nearby devices.
---	--	--

IMPORTANT NOTES

Placement • Depending on the material and temperature of the surface on which you place the unit, its rubber feet may discolor or mar the surface. Maintenance • Never use benzene, thinners, alcohol or solvents of any kind, to avoid the possibility of discoloration and/or deformation.	Additional Precautions • When disposing of the packing carton or cushioning material in which this unit was packed, you must observe the waste disposal regulations that apply to your locality. • When opening/closing the lid, please be careful not to get your fingers pinched between the movable part and the unit. In places where small children are present, make sure that an adult provides supervision and guidance.	Intellectual Property Right • Roland, BOSS are either registered trademarks or trademarks of Roland Corporation in the United States and/or other countries. • Company names and product names appearing in this document are registered trademarks or trademarks of their respective owners.
---	--	---

Manufacturer: Roland Corporation 1-6-4 Shinmiyakoda, Hamana-ku, Hamamatsu, Shizuoka 431-2103, JAPAN Importer: Roland Europe Group Limited Hive 2, 1530 Arlington Business Park, Theale, Reading, Berkshire. RG7 4SA United Kingdom Responsible Person/Authorized Representative: Roland Central Europe NV ENA 23 Zone 1 nr. 1620 Klaus-Michael Kuehnleaan 13, 2440 Geel, BELGIUM	For EU Countries CE
Manufacturer: Roland Corporation 1-6-4 Shinmiyakoda, Hamana-ku, Hamamatsu, Shizuoka 431-2103, JAPAN Importer: Roland Europe Group Limited Hive 2, 1530 Arlington Business Park, Theale, Reading, Berkshire. RG7 4SA United Kingdom	For the U.K. UK CA

For EU Countries This symbol indicates that in EU countries, this product must be collected separately from household waste, as defined in each region. Products bearing this symbol must not be discarded together with household waste. Dieses Symbol bedeutet, dass dieses Produkt in EU-Ländern getrennt vom Hausmüll gesammelt werden muss gemäß den regionalen Bestimmungen. Mit diesem Symbol gekennzeichnete Produkte dürfen nicht zusammen mit dem Hausmüll entsorgt werden. Ce symbole indique que dans les pays de l'Union européenne, ce produit doit être collecté séparément des ordures ménagères selon les directives en vigueur dans chacun de ces pays. Les produits portant ce symbole ne doivent pas être mis au rebut avec les ordures ménagères. Questo simbolo indica che nei paesi della Comunità europea questo prodotto deve essere smaltito separatamente dai normali rifiuti domestici, secondo la legislazione in vigore in ciascun paese. I prodotti che riportano questo simbolo non devono essere smaltiti insieme ai rifiuti domestici. Ai sensi dell'art. 13 del D.Lgs. 25 luglio 2005 n. 151. Este símbolo indica que en los países de la Unión Europea este producto debe recogerse aparte de los residuos domésticos, tal como está regulado en cada zona. Los productos con este símbolo no se deben depositar con los residuos domésticos. Este símbolo indica que nos países da UE, a recolha deste produto deverá ser feita separadamente do lixo doméstico, de acordo com os regulamentos de cada região. Os produtos que apresentem este símbolo não deverão ser eliminados juntamente com o lixo doméstico. Dit symbool geeft aan dat in landen van de EU dit product gescheiden van huishoudelijk afval moet worden aangehouden, zoals bepaald per gemeente of regio. Producten die van dit symbool zijn voorzien, mogen niet samen met huishoudelijk afval worden verwijderd. Dette symbol angiver, at i EU-lande skal dette produkt opbeholdes adskilt fra husholdningsaffald, som defineret i hver enkelt region. Produkter med dette symbol må ikke smides ud sammen med husholdningsaffald. Dette symbol indikerer at produktet må behandles som specialaffald i EU-land, det vil betyde separat for den enkelte region, og ikke kastes sammen med vanlig husholdningsaffald. Produkter som er merket med dette symbol, må ikke kastes sammen med vanlig husholdningsaffald. Tento symbol označuje, že v krajínach EÚ sa musí zber tohto produktu uskutočniť oddelene od domáceho odpadu, podľa nariadení platných v konkrétnych krajinách. Produkty s týmto symbolom sa nemajú vyhazovať spolu s domovým odpadom. Preto symbol udává, že v zemích EU musí být tento výrobek shromažďován odděleně od domácího odpadu, jak je určeno pro každou zemi. Výrobky nesoucí tento symbol se nemají vyhazovat spolu s domácími odpady. Tento symbol vyjadruje, že v krajinách EÚ sa musí zber tohto produktu uskutočniť oddelene od domového odpadu, podľa nariadení platných v konkrétnych krajinách. Produkty s týmto symbolom sa nemajú vyhazovať spolu s domovým odpadom. Este simbolul indică, în țările UE, ca produsul trebuie să fie depozitat separat de deșeurile menajere, în conformanță cu regulamentele din fiecare regiune. Produsele care prezintă acest simbol nu trebuie aruncate împreună cu deșeurile menajere. Šis simbolis rodo, kad ES valstybės šis produktas turi būti surinkamas atskirai nuo buitinių atliekų, kaip nustatyta kiekvienoje regione. Šiuo simboliu paženklinoti produktai neturi būti šimunami kartu su buitiniams atliekomis. Šis simbols norāda, ka ES valstīs šo produktu jāievie atsevišķi no mājumniecības atkritumiem. Produktus ar šo simbolu nedrīkst ieviet kopā ar mājumniecības atkritumiem. Tento symbol označuje, že je treba proizvod v državah EU zbirati ločeno od gospodinjstvih odpadov, tako kot je določeno v vsaki regiji. Proizvoda s tem znakom ni dovoljeno odlagati skupaj z gospodinjstvih odpadki. Tento symbol označuje, že v krajínach EÚ sa musí zber tohto produktu uskutočniť oddelene od domáceho odpadu, podľa nariadení platných v konkrétnych krajinách. Produkty s týmto symbolom sa nemajú vyhazovať spolu s domovým odpadom. Tento symbol označuje, že v krajínach EÚ sa musí zber tohto produktu uskutočniť oddelene od domáceho odpadu, podľa nariadení platných v konkrétnych krajinách. Produkty s týmto symbolom sa nemajú vyhazovať spolu s domovým odpadom.
