


Before assembling this product

- Do not adjust the angle of the stand or move the stand while the amp rests on top. Failure to observe this may cause the amp and stand to fall or topple over.
- Take sufficient care not to get your fingers or other body parts pinched in the stand during assembly.
- Make sure that the knob bolt and locking lever are securely locked when you use this stand. In particular, check that these parts are securely locked before use. If these parts are not securely locked, the amp may fall and injure you.
- Set up the stand so that the center of the amp is at the center of the stand.
- You should only use this stand with combo amps. This stand is not made for use with head amps or cabinets.




Parts of This Stand

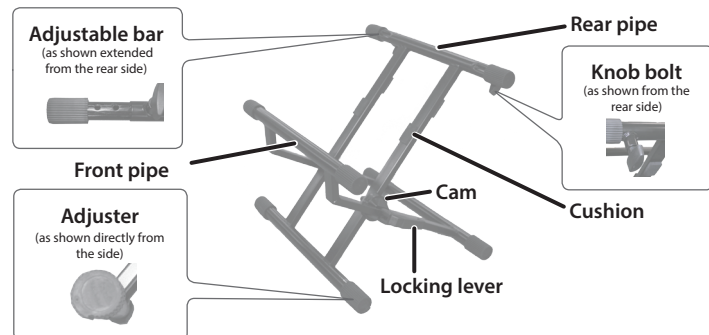


Setting Up the Stand

1. Place the stand on the floor as shown in the illustration.

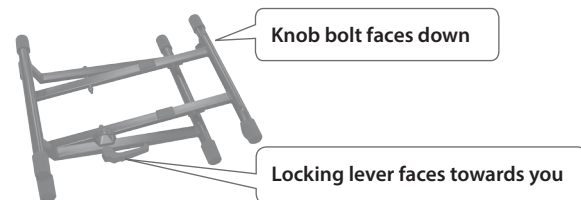


2. Release the locking lever.

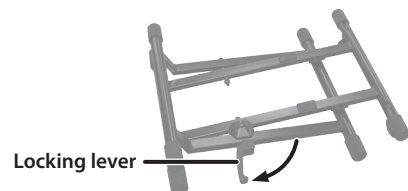

3. Decide on the angle you want to use, and lock the locking lever.

With one hand, pull up the rear pipe and adjust the angle while making sure that the cam teeth are correctly engaged. Once the stand is at the desired angle, lock the locking lever with your other hand.

* Adjust the angle of the stand within the range shown by the cam markings.

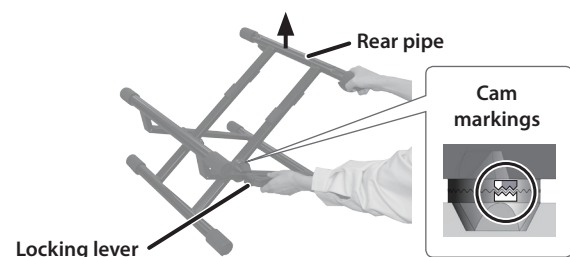


NOTE

- Don't put the amp on the stand yet. Doing so might make the stand or amp topple over and fall, causing injury.
- The stand does not stand up by itself while the locking lever is released. Take sufficient care not to get your hands, fingers or other body parts pinched in the stand.

4. Adjust the width of the rear pipe.

While pulling on the knob bolt, pull the rubber cap outwards. The adjustable bar can be set in one of five positions, according to the width of your amp.

- Once you've decided how long to extend the rear pipe, reinsert the pin of the knob bolt into the respective hole of the adjustable bar.
- The maximum length of the adjustable bar is reached when you can see all three holes from the rear side. Be careful not to pull the pipe out any more than this, as it will come off.

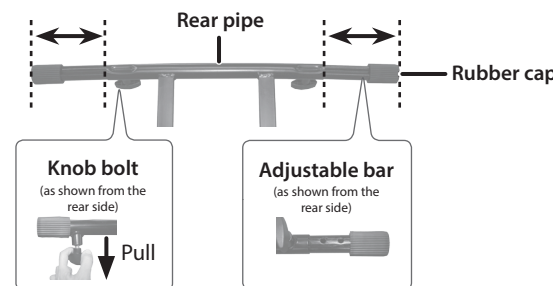


NOTE

To prevent the amp from falling off the stand or being damaged, make sure to fully insert the rubber caps of the adjustable bar.

5. Make sure that the stand does not wobble.

If the stand wobbles, turn the adjusters on both sides to adjust them. The adjusters feature different thicknesses on certain places along their circumference. Use these to make minor adjustments to the height.

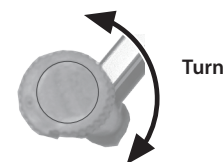

6. Set up the amp.

Place the amp on the stand, making sure that it is stable.

If the angle of the stand isn't right, make sure to first take the amp off and then release the locking lever while holding the rear pipe. Adjust the angle and then lock the locking lever.

- The side panels of the amp should rest firmly atop the rubber caps of the rear pipe. The amp should be set up so that the rubber caps and cushions on the rear pipe hold the amp in place.



NOTE

- Do not adjust the angle of the stand while your amp rests on top.
- The stand does not stand up by itself while the locking lever is released. Take sufficient care not to get your hands, fingers or other body parts pinched in the stand.



USING THE UNIT SAFELY

INSTRUCTIONS FOR THE PREVENTION OF FIRE, ELECTRIC SHOCK, OR INJURY TO PERSONS

About ⚠ WARNING and ⚠ CAUTION Notices

⚠ WARNING	Used for instructions intended to alert the user to the risk of death or severe injury should the unit be used improperly.
⚠ CAUTION	Used for instructions intended to alert the user to the risk of injury or material damage should the unit be used improperly. * Material damage refers to damage or other adverse effects caused with respect to the home and all its furnishings, as well to domestic animals or pets.

About the Symbols

⚠	The ⚠ symbol alerts the user to important instructions or warnings. The specific meaning of the symbol is determined by the design contained within the triangle. In the case of the symbol at left, it is used for general cautions, warnings, or alerts to danger.
⛔	The ⛔ symbol alerts the user to items that must never be carried out (are forbidden). The specific thing that must not be done is indicated by the design contained within the circle. In the case of the symbol at left, it means that the unit must never be disassembled.
🔌	The 🔌 symbol alerts the user to things that must be carried out. The specific thing that must be done is indicated by the design contained within the circle. In the case of the symbol at left, it means that the power-cord plug must be unplugged from the outlet.

ALWAYS OBSERVE THE FOLLOWING

⚠ WARNING

Do not disassemble or modify by yourself
Do not carry out anything unless you are instructed to do so in the owner's manual. Otherwise, you risk causing malfunction.



Do not repair or replace parts by yourself
Be sure to contact your dealer, a Roland service center, or an official Roland dealer.

For a list of Roland service centers and official Roland dealers, refer to the Roland website.



Do not use or store in the following types of locations

- Subject to temperature extremes (e.g., direct sunlight in an enclosed vehicle, near a heating duct, on top of heat-generating equipment); or are
- Damp (e.g., baths, washrooms, on wet floors); or are
- Exposed to steam or smoke; or are
- Subject to salt exposure; or are
- Exposed to rain; or are
- Dusty or sandy; or are
- Subject to high levels of vibration and shakiness; or are
- Placed in a poorly ventilated location.



Do not place in an unstable location

Otherwise, you risk injury as the result of the unit toppling over or dropping down.



Be cautious to protect children from injury

Always make sure that an adult is on hand to provide supervision and guidance when using the unit in places where children are present, or when a child will be using the unit.



Do not drop or subject to strong impact

Otherwise, you risk causing damage or malfunction.



⚠ CAUTION

Use only product manufactured by Roland
This stand for use only with specific Roland musical instruments. Use with other models is capable of resulting in instability causing possible injury.



Evaluate safety issues before using stands

Even if you observe the cautions given in the owner's manual, certain types of handling may allow the amp to fall from the stand, or cause the stand to overturn. Please be mindful of any safety issues before using this product.



Avoid climbing on top of the unit, or placing heavy objects on it

Otherwise, you risk injury as the result of the unit toppling over or dropping down.



Disconnect all cords/cables before mounting the stand

Damage or malfunction may result if you fail to disconnect all cables before mounting the stand.



Take care so as not to get fingers pinched

When setting up the stand and adjusting the angle of the stand, take care so as not to get fingers, toes, etc., pinched. Whenever a child uses the unit, an adult should be on hand to provide supervision and guidance.

- stand unit
- cam



Main Specifications

Weight Capacity	Maximum 21 kg Maximum 46 lbs 5 oz
Dimensions	486–694 (W) x 340–445 (D) x 520–445 (H) mm 19-3/16–27-3/8 (W) x 13-7/16–17-9/16 (D) x 20-1/2–17-9/16 (H) inches Folded Size: 490 (W) x 565 (D) x 135 (H) mm 19-5/16 (W) x 22-1/4 (D) x 5-3/8 (H) inches
Weight	4.1 kg 9 lbs 1 oz

* This document explains the specifications of the product at the time that the document was issued. For the latest information, refer to the Roland website.