



Setting Up

Set up the stand as shown in the illustration.

DBS-10

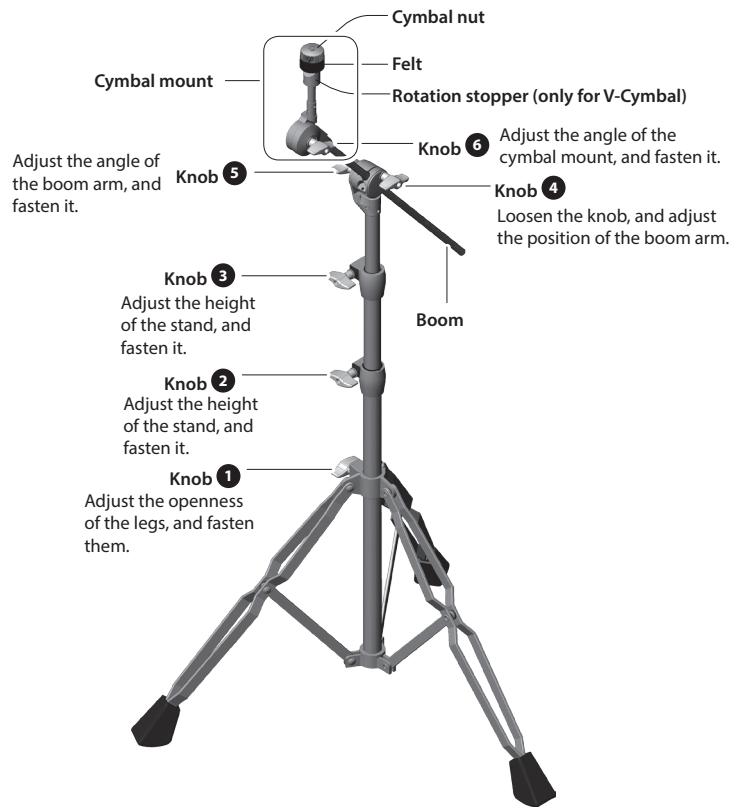

DCS-10

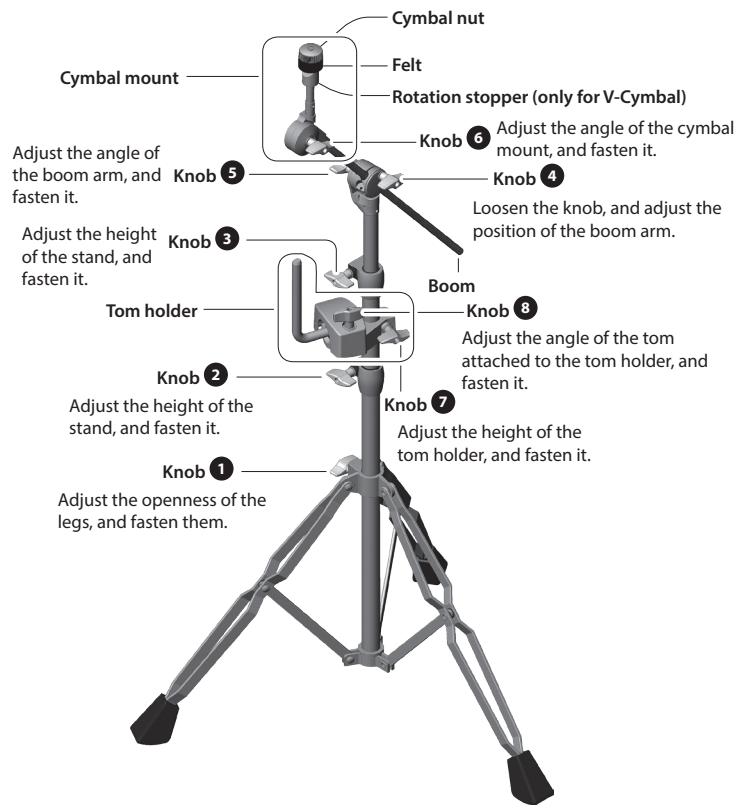

Caution when setting up

- The tips of the cymbal mount and tom holder are sharp. Handle them with care.
- When setting up or storing the stand, be careful not to pinch the fingers you use to handle the stand.
- When setting up, ensure that the tripod of the stand is sufficiently open. If the tripod is insufficiently open, the appropriate degree of stability might not be obtained.
- If you are using the boom arm in a significantly extended position, stability will improve if the cymbal is directly above one of the tripod legs.
- Likewise, when attaching the tom to the tom holder, stability will improve if the tom is directly above one of the tripod legs.
- When you loosen a knob to adjust the height or angle of a tom or cymbal, the pipe or pad might drop and pinch your fingers. Use one hand to support the tom or pipe while you slowly loosen the knob.
- To prevent the stand from tipping over or falling, tighten the knobs until there is no looseness. When tightening knob 5 or knob 6, ensure that the gears that maintain the angle are firmly meshed.

Main Specifications

Roland DBS-10: Drum Boom Stand	
Weight	4.4 kg / 9 lbs 12 oz
Accessories	Cable ties, Owner's Manual

Roland DCS-10: Drum Combination Stand	
Weight	5.2 kg / 11 lbs 8 oz
Accessories	Cable ties, Owner's Manual

* This document explains the specifications of the product at the time that the document was issued. For the latest information, refer to the Roland website.

USING THE UNIT SAFELY

INSTRUCTIONS FOR THE PREVENTION OF FIRE, ELECTRIC SHOCK, OR INJURY TO PERSONS	
About ⚠ WARNING and ⚠ CAUTION Notices	
⚠ WARNING	Used for instructions intended to alert the user to the risk of death or severe injury should the unit be used improperly.
⚠ CAUTION	Used for instructions intended to alert the user to the risk of injury or material damage should the unit be used improperly. * Material damage refers to damage or other adverse effects caused with respect to the home and all its furnishings, as well to domestic animals or pets.
About the Symbols	
⚠	The ⚠ symbol alerts the user to important instructions or warnings. The specific meaning of the symbol is determined by the design contained within the triangle. In the case of the symbol at left, it is used for general cautions, warnings, or alerts to danger.
ⓘ	The ⓘ symbol alerts the user to items that must never be carried out (are forbidden). The specific thing that must not be done is indicated by the design contained within the circle. In the case of the symbol at left, it means that the unit must never be disassembled.
🔌	The 🔌 symbol alerts the user to things that must be carried out. The specific thing that must be done is indicated by the design contained within the circle. In the case of the symbol at left, it means that the power-cord plug must be unplugged from the outlet.

ALWAYS OBSERVE THE FOLLOWING

⚠ WARNING

Do not disassemble or modify by yourself
Do not carry out anything unless you are instructed to do so in the owner's manual. Otherwise, you risk causing malfunction.



Do not repair or replace parts by yourself
Be sure to contact your dealer, a Roland service center, or an official Roland dealer.



Do not use or store in the following types of locations

- Subject to temperature extremes (e.g., direct sunlight in an enclosed vehicle, near a heating duct, on top of heat-generating equipment); or are
- Damp (e.g., baths, washrooms, on wet floors); or are
- Exposed to steam or smoke; or are
- Subject to salt exposure; or are
- Exposed to rain; or are
- Dusty or sandy; or are
- Subject to high levels of vibration and shakiness; or are
- Placed in a poorly ventilated location.



Do not place in an unstable location
Otherwise, you risk injury as the result of the unit toppling over or dropping down.



Be cautious to protect children from injury
It is dangerous to carelessly approach a drum set. The drum set and the stands are heavy, and use many metal parts that have sharp protrusions. A person who approaches carelessly might accidentally bump, catch, or trip themselves.



Do not drop or subject to strong impact
Otherwise, you risk causing damage or malfunction.



⚠ CAUTION

Use only stand manufactured by Roland
This stand for use only with specific Roland musical instruments. See apparatus instructions. Use with other models is capable of resulting in instability causing possible injury.



Evaluate safety issues before using stands
Even if you observe the precautions listed in this owner's manual, it is possible for the stand to fall over depending on the conditions of use. Check the entire setup for safety before use.



Route all power cords and cables in such a way as to prevent them from getting entangled
Injury could result if someone were to trip on a cable and cause the unit to fall or topple.



Disconnect all cords/cables before moving the unit
Damage or malfunction may result if you fail to disconnect all cables before moving the unit.



Take care so as not to get fingers pinched
When handling the following moving parts, take care so as not to get fingers, toes, etc., pinched. Whenever a child uses the unit, an adult should be on hand to provide supervision and guidance.



- Legs
- Knobs
- Tom holders

Keep small items out of the reach of children
To prevent accidental ingestion of the parts listed below, always keep them out of the reach of small children.



- Included Parts
Cable ties
- Removable Parts
Screws, washers, nuts, felts, springs, knobs, cymbal nuts, rotation stoppers

IMPORTANT NOTES

- Placement**
- Depending on the material and temperature of the surface on which you place the unit, its rubber feet may discolor or mar the surface.
- Maintenance**
- Never use benzine, thinners, alcohol or solvents of any kind, to avoid the possibility of discoloration and/or deformation.
 - If cleaning is necessary, wipe with a soft dry cloth.
- Intellectual Property Right**
- Roland is either a registered trademark or a trademark of Roland Corporation in the United States and/or other countries.
 - Company names and product names appearing in this document are registered trademarks or trademarks of their respective owners.



Roland Service Centers and Distributors

When you need repair service, access this URL and find your nearest Roland Service Center or authorized Roland distributor in your country.

<http://roland.cm/service>

