

ERNE BAL[®] PROTUNE USB-C Clip-On Tuner



USER MANUAL




Please read through this manual before using the device,
and keep this manual for future reference.



SCAN FOR ADDITIONAL LANGUAGES

PRODUCT

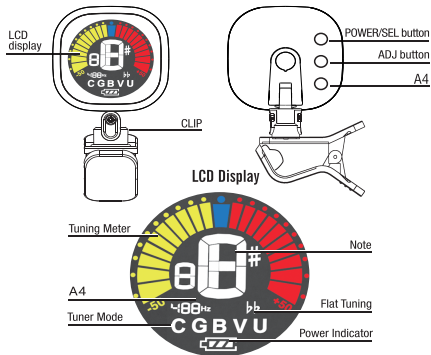

Clip

Sturdy yet flexible clip that can fit onto headstock of your instrument firmly and securely.

Power/SEL button

POWER button: Press and hold this button for 2 seconds to turn it ON/OFF.

SEL button: Press this button to select adjustable parameters afterwards please press this button again to save your settings.

ADJ button


Press this button to set the tuning mode.
Press this button continuously after the SEL button is pressed to set your desired reference pitch and flat tuning (Only available under Guitar or Bass mode).

FEATURES

- Chromatic Tuner with Guitar, Bass, Ukulele and Violin.
- Built-in rechargeable battery allows up to 10 hours of continuous use per charge.
- High contrast color display with strong and flexible clip for the best viewing angle.
- Auto power off function for maximum battery life.

BATTERY CHARGING

When the battery level is running low, please use the included USB charging cable to recharge the unit.

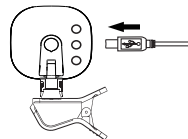

NOTICE:

This device uses Li-Po battery, to reach the maximum battery life, please charge it before using it. If the device will not be used for a long time, please charge it at least once every 3 months to maintain battery health.

OPERATION

1.Power ON/OFF the tuner

Please press and hold the POWER/SEL button for 2 seconds to turn it ON or OFF. If this tuner is idle for 5 minutes, it will shut-off automatically to save its battery life.

2.Choose Tuning Mode

Please press ADJ button to choose the tuning mode. There are 5 built-in tuning modes in this tuner: Chromatic - Guitar - Bass - Ukulele - Baritone.

3.Set the Reference Pitch and Flat Tuning

Please press the POWER/SEL button once to activate the reference pitch setting, then use the ADJ button to set your desired reference pitch, press the POWER/SEL button again to save your settings.

Reference Pitch Range: 431Hz-449Hz.

Flat tuning only available for Guitar and Bass mode, press POWER/SEL button twice to activate the flat tuning setting, then use the ADJ button to set your desired flat tuning, press the POWER/SEL button again to save your settings.

Flat Tuning Setting: Standard tuning - b-bb

4.Tuning Guide

Chromatic mode is for experienced users, for beginners please choose the tuning mode accordingly to your instrument.



5.Note Detection:

- Chromatic: C, C[#], D, E^b, E, F, F[#], G, G[#], A, B^b, B
- Guitar: 6E, 5A, 4D, 3G, 2B, 1E
- Bass: 4E, 3A, 2D, 1G
- Ukulele: 4G, 3C, 2E, 1A
- Violin: 4G, 3D, 2A, 1E

SPECIFICATIONS

- Tuning range: A0(27.50Hz)- C8(4186Hz)
- Detection method: Piezo(Clip)
- Flat tuning: b-bb
- Reference pitch: 431Hz-449Hz
- Tuning Modes: Chromatic, Guitar, Bass, Ukulele, Baritone.
- Tuning precision: ±1 cent
- Power: Built-in rechargeable Li-Po battery
- Dimensions: 49(L) x 26(W) x 40(H) mm
- Weight: 21g

ACCESSORIES

- Owner's manual
- TYPEC USB charging cable