



FAZLEY

StreamTone Wireless Starter

Wireless guitar system

Introduction

Thank you for purchasing the Fazley StreamTone Wireless Starter. Before unpacking the box and the included components, we recommend reading this user manual to familiarize yourself with the features this device has to offer. When unpacking the box, please check that all the parts and accessories listed below are included. If the StreamTone Wireless Starter does not work correctly or if you encounter any issues during use, please turn off the device and contact your dealer for more information and assistance.

Box contents:

- 2x Fazley StreamTone Wireless Starter (transmitter and receiver)
- 1x USB to 2x USB-C adapter
- 2x 6.3 mm to 3.5 mm jack adapter

Inspection of the device and included accessories

If you suspect that the device or any of the included parts were damaged or became defective during transport, please contact your dealer immediately.

Note: illustrations shown in this user manual may differ slightly from the actual product.

Safety instructions



WARNING!



Keep this device away from moisture, water and rain to prevent any danger of electric shocks!

Every person involved with the installation, operation and maintenance of this device must:

- Have read the instructions included in this user manual.

- Be sure that neither the device nor the included accessories are damaged. Should the device or the included accessories be damaged, please contact your dealer for further advice.

- Ensure that the device is in good working condition and is safe to operate. Please follow the advice and instructions as they are described in this user manual.

Damage caused by misuse and/or modifications made to the device is not covered by the warranty.

This device does not contain any parts that can be repaired or replaced by the user. Should maintenance or repairs be necessary, they must be carried out by a qualified technician.

Important health & safety information:

- Do not remove any labels or stickers from this device.

- Do not leave any cables lying around where they may cause a tripping hazard.

- The housing of this device must not be opened and any hardware or software that may be present must not be modified.

- Do not use the device at extreme volumes that are higher than necessary for optimal performance.

- The device must only be used indoors; contact with water, rain and moisture must always be avoided. Do not place any objects containing liquid on top of the device.

- Never expose the device to flames or heat sources; do not place it near flammable fluids, gases or objects.

- Disconnect this device if it is not being used for a long period of time, if maintenance is required, or if it needs to be cleaned.

- Do not pull or tug on any cables to remove plugs, as this may cause damage.

- Do not use any cables other than those specified in this manual. Do not use defective cables. Please contact your dealer if the included or specified cables do not function properly with this device.
- If the device is exposed to extreme temperature changes (e.g. when transported from a cold outdoor environment into a warm indoor environment), do not turn it on until it has reached room temperature. This prevents moisture (condensation) from forming inside the device, which may cause electric shocks.

Battery danger

WARNING!

Using the battery and maintaining its lifespan

Both the transmitter and the receiver of the Fazley StreamTone Wireless Starter are equipped with a pre-installed lithium battery. After unpacking the system, we recommend fully charging the batteries before turning the devices on. Switching on the devices immediately after unpacking may affect the lifespan of the batteries.

If you suspect that either battery is defective and needs to be replaced, please contact your dealer for further advice. While experienced technicians may be able to replace the battery themselves, this is always done at your own risk. Fazley cannot be held liable for any damage or personal injury caused by misuse.

WARNING!

There is a danger of explosion if the battery is not replaced correctly.

Always replace the battery with the same battery type and quality.

Never expose batteries to intense heat such as sunlight, open flames etc.

Never leave batteries in a high-temperature environment, to avoid the danger of explosion or leakage of flammable gases or liquids.

Never burn a battery or place it in a hot oven. Never damage a battery by cracking it or making holes or incisions in the outer casing, as this may cause the battery to explode.


Never expose a battery to extremely low air pressure (at high altitudes), to avoid the danger of explosion or leakage of flammable gases or liquids.

Recycling

As soon as the battery reaches the end of its lifespan or no longer functions as it should, it needs to be removed from the device.

Never dispose of batteries with your normal household waste. Batteries may contain substances that are harmful to the environment. When batteries are correctly recycled, they are a valuable source of reusable materials. Contact your local council for information about the safe disposal and recycling of batteries.

Overview of connections and controls

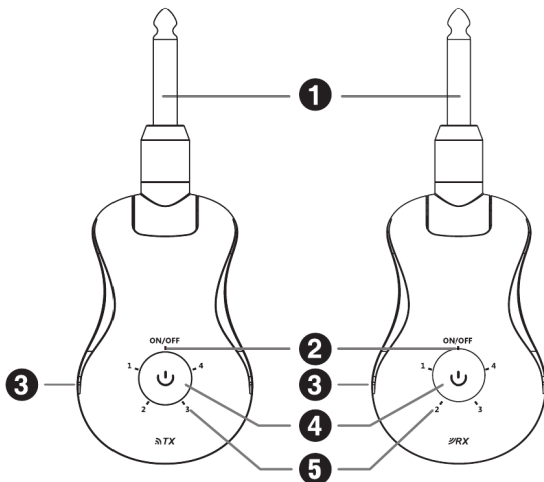

1. 6.35 mm (1/4") guitar plug
2. Power indicator
3. USB-C charging port
4. Button: channel selection and on/off switch
5. Channel indicators 1-4

Using the StreamTone Wireless Starter

Switching on and pairing

Press and hold the button for 1 second to switch the device on, and press and hold it for 2 seconds to switch it off. After switching on, the device is set to channel 1 by default and indicator light 1 blinks.

Briefly press the button to cycle through channels 1 to 4; the indicator light of the selected channel blinks. When the transmitter and receiver are set to the same channel, they connect automatically.

When the indicator light of the selected channel stays on continuously, pairing is successful.

Up to 4 sets can be used at the same time. Set each set to a different channel so they can be used independently of each other.

Charging

If the battery indicator lights up green after switching on, the battery is charged. A red light indicates that the battery needs to be charged.

When the battery level drops below 10%, charge the device: during charging the green light blinks, and it stays on when the battery is fully charged.

Specifications

Audio	
Sound quality	48 kHz / 16-bit
Frequency range	20 Hz – 20 kHz, ± 1 dB
Dynamic range	> 103 dB
Signal-to-noise ratio	98 dB
Distortion	< 0.05%
Wireless	
Frequency band	2.4 GHz
Range	Up to 30 m outdoors, up to 15 m indoors
Latency	< 8 ms
Simultaneous use	Up to 4 sets (channels 1–4)
Connections	
Plug	6.35 mm (1/4") jack, rotates 270°
Charging port	USB-C
Power & battery	
Battery	Rechargeable lithium battery, 450 mAh, 3.7 V, with short-circuit protection
Charging	Via the included USB to 2x USB-C adapter
Battery life	6–8 hours

Symbol explanation

	WEEE: Please ensure that this device is disposed of correctly. This product is part of the WEEE directive – the Waste Electrical and Electronic Equipment directive. The requirements in this directive apply to all manufacturers and producers of electronic equipment in the EU. Do not dispose of this product with regular household waste. Contact your local government for more information on recycling and disposal of this product in your region. By recycling this product properly after use, we can work together to continue enjoying these types of products while protecting our environment from pollution as much as possible.
	CE: The CE marking indicates that this product complies with the directives and standards it is legally required to adhere to within the European Economic Area.
	UKCA: The UKCA marking indicates that this product complies with the regulations and standards it is legally required to adhere to in the United Kingdom.
	Indoor use only: This product is designed for indoor use only.

Contact:

Fazley musical instrument products and accessories
Verrijn Stuartweg 18
4462 GE Goes
The Netherlands

Please do not send any products directly to this address. If you wish to return a product for a refund or repair, please contact your local dealer for an RMA (Return Material Authorisation).

EU Declaration of Conformity

Fazley musical instrument products and accessories
Verrijn Stuartweg 18
4462 GE Goes
The Netherlands

This declaration of conformity is issued under the sole responsibility of the manufacturer.

Article code:

Fazley StreamTone
Wireless Starter

Article name:

Wireless guitar system (2.344 GHz, 2.360 GHz, 2.371 GHz)

The object of the declaration described above is in conformity with the relevant Union harmonisation legislation:

Directive 2014/53/EU of the European Parliament and of the Council of 16 April 2014 on the harmonisation of the laws of the Member States relating to the making available on the market of radio equipment (RED).

Used standards:

EN IEC 62368-1:2020+A11:2020,
EN 62479:2010,
EN 50663:2017,
ETSI EN 301 489-1 V2.2.3 (2019-11),
ETSI EN 301 489-3 V2.3.2 (2023-01),
ETSI EN 300 440 V2.2.1 (2018-07)

The object of the declaration described above is in conformity with Directive 2011/65/EU of the European Parliament and of the Council of 8 June 2011 on the restriction of the use of certain hazardous substances in electrical and electronic equipment (RoHS).


Used standards:

IEC 62321-4:2013+A1:2017,
IEC 62321-5:2013,
IEC 62321-6:2015,
IEC 62321-7-1:2015,
IEC 62321-7-2:2017,
IEC 62321-8:2017

Signed for and on behalf of:

Fazley musical instrument products and accessories
Goes, 1-5-2026

Jochanan Bax, Director

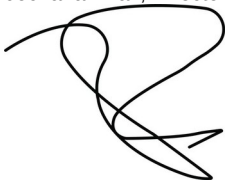A stylized, handwritten signature in black ink, consisting of several overlapping loops and a long horizontal stroke at the bottom.