ABELHA
TROPICAL FUZZ

2.1MM +9VDC JACK

CENTER NEGATIVE POLARITY
CURRENT DRAW - 60MA

-OUTPUT-

-LOUD-
MASTER VOLUME

-HI-
HIGH FREQUENCIES

-LO-
LOW FREQUENCIES


-BYPASS SWITCH-
ON/OFF TRUE BYPASS

SINGLE TAP
EFFECT ON/OFF

DOUBLE TAP
MODE SWITCH
BUZZ/TROPICAL

HOLD WHEN ENGAGED
MOMENTARILY SWITCHES
BETWEEN MODES

HOLD WHEN DISENGAGED
MOMENTARILY TURNS
EFFECT ON

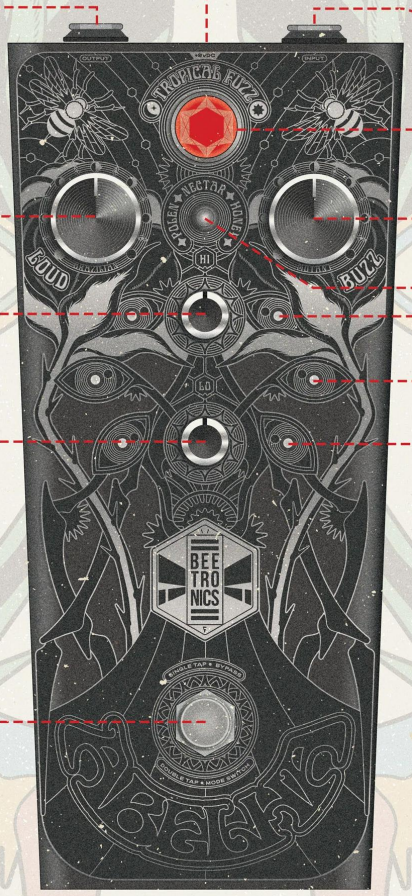

-INPUT-

-BYPASS INDICATOR-

-BUZZ-
FUZZ CONTROL

-FLAVOR TOGGLE-
SWITCHES BETWEEN THE
THREE SWEET LEVELS

POLEN
SAGGED LOW GAIN BUZZ

NECTAR
ROUND HIGH GAIN FUZZ

HONEY
SWEET HIGH GAIN DRIVE

-MODE INDICATOR LEDS-

-EFFECT ON-
NORMAL MODE
BLUE/PINK/LIGHT PINK
TROPICAL MODE
BLUE/YELLOW/GREEN

-EFFECT OFF-
NORMAL MODE
BLUE
TROPICAL MODE
GREEN

BEEWARE!: BEETRONICS WILL REPAIR/REPLACE ANY MALFUNCTIONING PRODUCT WITHIN A YEAR OF THE PURCHASE DATE. ANY DAMAGE CAUSED BY MODIFICATIONS OR MISUSE MAY CANCEL THIS WARRANTY.

FOOTSWITCH PROFILE SETTINGS

YOU CAN CUSTOMIZE YOUR FOOTSWITCH PROFILE SETTINGS ON THE ABELHA TO SUIT YOUR PREFERENCES. THIS ALLOWS YOU TO CONTROL THE SPEED OF MOMENTARY CHANGES WHEN USING THE HOLD FUNCTION TO SWITCH BETWEEN BUZZ AND TROPICAL MODES. YOU CAN CHOOSE FROM THREE SETTINGS: IMMEDIATE, MEDIUM, OR LAZY.

TO SET YOUR PREFERRED PROFILE:

1-DISCONNECT THE POWER CABLE FROM THE DC JACK. 2-PRESS AND HOLD THE FOOTSWITCH. 3-WHILE HOLDING THE FOOTSWITCH, RECONNECT THE POWER CABLE TO THE DC JACK. 4-THE LEDS WILL BEGIN FLASHING. 5-RELEASE THE FOOTSWITCH. 6-THE MODE INDICATOR LEDS WILL SHOW YOUR CURRENT PROFILE. 7-YOU CAN CYCLE THROUGH THE PROFILES BY TAPPING THE FOOTSWITCH. 8-WHEN YOU REACH YOUR DESIRED PROFILE, PRESS AND HOLD THE FOOTSWITCH TO BYPASS, AND YOUR PROFILE WILL BE SAVED TO THE PEDAL UNTIL YOU DECIDE TO CHANGE IT AGAIN.

MODE INDICATOR LEDS WILL LIGHT UP ACCORDINGLY:
TOP ROW: IMMEDIATE SETTING
TOP AND MIDDLE: MEDIUM SETTING
TOP, MIDDLE, AND BOTTOM: LAZY SETTING