



MVX2U GEN 2

MVX2U Gen 2 Digital Audio Interface

Online user manual for the MVX2U Gen 2 XLR to USB digital audio interface
Version: 1.3 (2026-H)

Table of Contents

MVX2U GEN 2 MVX2U Gen 2 Digital Audio Interface	3	Recording Tips	20
General Description	3	Control your Levels	20
Features	3	Find the Sweet Spot	20
Using the MVX2U Gen 2 with MOTIV	3	Monitor Your Sound	20
Connect an XLR Microphone To Your Device	4	How to Avoid Plosives When Recording	20
MVX2U Inputs and Outputs	4	Limit Device Types	20
Auto Level Device Settings	5	Close Unused Apps	20
Manual Device Settings	8	Keep equipment connected during updates	20
Mounting Instructions	10	Mounting Instructions	20
The MOTIV Mix Recording App	10	Troubleshooting	21
Features	10	MOTIV Mix Troubleshooting	21
Quick Setup with MOTIV Mix	11	MVX2U Troubleshooting	22
Use MOTIV Mix in Compact or Full Mode	11	Update Your Firmware	22
MOTIV Mix Layout	12	Tips to ensure a reliable update.	22
Choose an Audio Output Mode	13	Specifications	22
Shure Virtual Audio (VAD)	13	Accessories	24
Using MOTIV Mix with your Mac and PC	14	Furnished Accessories	24
Your Recordings	18	Certifications	24
Soundcheck	19		
Enhance	19		

MVX2U GEN 2

MVX2U Gen 2 Digital Audio Interface

General Description

The Shure MVX2U Gen 2 Digital Audio Interface is a single-channel XLR to USB adapter for professional quality audio recording or streaming on desktop, tablet, or any USB-C mobile device using any XLR microphone. Compact and mobile-friendly, the MVX2U achieves exceptional definition and clarity in imperfect audio environments with built-in digital audio processing that includes Auto Level Mode, Real-time Denoiser, and Digital Popper Stopper. Provides up to 60 dB of gain and 48 V phantom power for dynamic and condenser XLR microphones.

Features


- Connect, Record, Create with any XLR Microphone on any Device
- Convenient Mobile Plug-and-Play Operation
- Durable, Versatile Design
 - USB connector allows XLR microphones to be used for digital recording
 - Rugged, all-metal construction for outstanding reliability
- Studio Quality Audio with DSP Features (Auto Level Mode, Digital Popper Stopper™, Real-time Denoiser)
- Zero Latency Monitoring
- USB-C Powered, no external power supply needed
- Compatible with Windows and Mac computers, iOS and Android Mobile Devices.

Using the MVX2U Gen 2 with MOTIV

MVX2U Gen 2 works with MOTIV Mix Desktop App, MOTIV Audio and MOTIV Video Mobile Apps. Configure DSP settings and record or livestream from any of your devices with USB-C.


- Adjust tone, sound signature, gain, compression, limiter, EQ, presets and more.
- Save your recording and monitor mix presets for quick set up.
- Manage your recorded audio in the Library.

Connect an XLR Microphone To Your Device

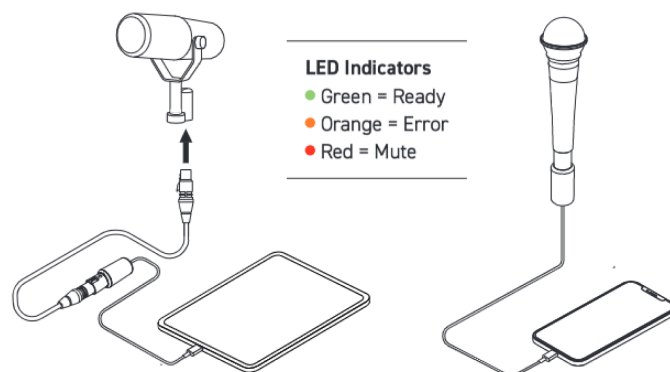


1. **Begin by connecting your audio equipment.** Plug your microphone into the MVX2U Gen 2 XLR connector directly or with an XLR cable.
2. **Use the USB-C cable to connect your MVX2U Gen 2 to your mobile device.** The LED on the MVX2U will turn red when the connection is made.
3. **Plug your headphones into the monitor output.**
4. **Download the MOTIV Video application** at https://www.shure.com/en-US/products/software/shure_plus_motiv_video. Your computer may request permission to use the MVX2U Gen 2 the first time the app is opened.
5. **Access customized controls for your MVX2U Gen 2 via the device icon.** The device icon is a wrench crossed with a microphone.
6. **Check audio levels and adjust microphone settings as needed.** Select Auto-Level mode for worry free recording.

MVX2U Inputs and Outputs

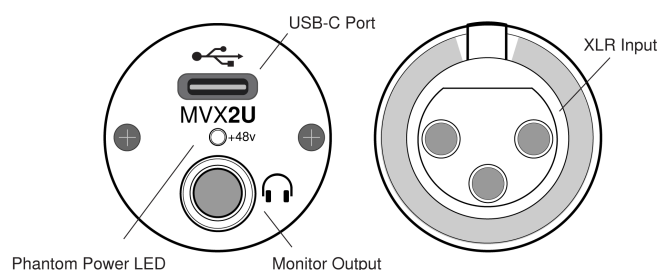

- **USB-C port:** Use the included USB-C cable to send and receive audio from your computer or recording device.
- **Phantom Power LED:** LED indicates whether Phantom Power is on or off.
- **3.5mm monitor output:** Connect to headphones or earphones for zero-latency direct monitoring.
- **XLR input:** Connect your microphone directly to the MVX2U or with an XLR cable.

LED Indicator Status

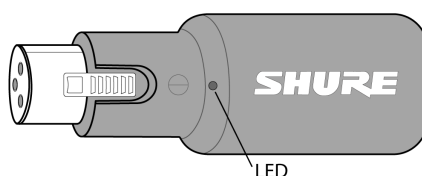


LED	Status
Green	USB connection is made
Amber	USB connection has failed
Amber Flashing	Firmware update is in progress
Red	MVX2U has been muted
Off	No connection

Note: Upon first connection, LED is amber and turns green once the device is ready.

Auto Level Device Settings

The MVX2U Gen 2 comes equipped with onboard digital signal processing (DSP) with zero-latency for any XLR mic. With the option to use Auto Level or Manual modes, you can change your mic settings to match your application. Auto Level mode automatically adjusts gain in the moment for clear, consistent, quality output. For more detailed control over your sound, use Manual mode to customize settings.

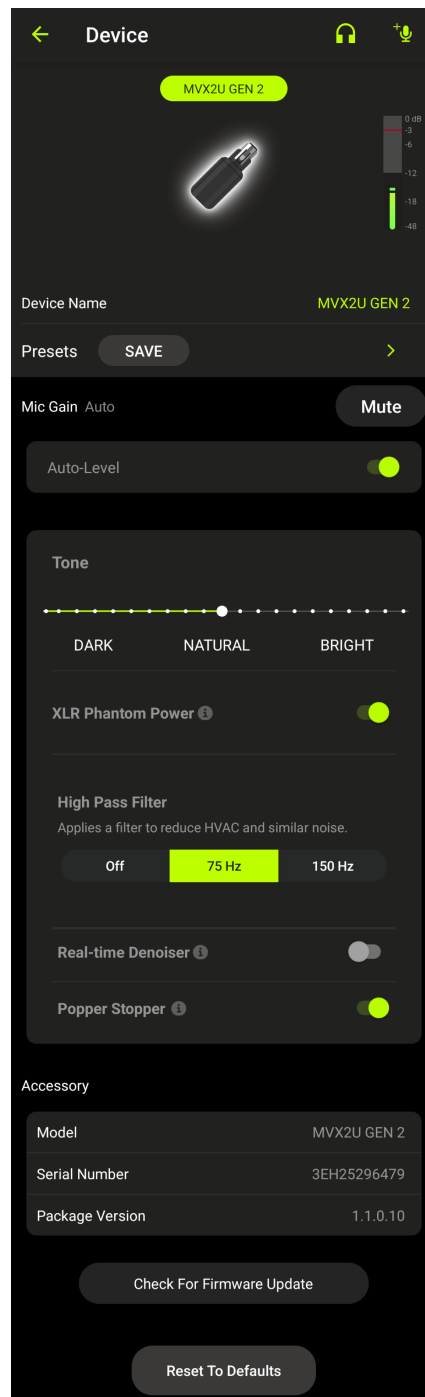


- **Presets** Tap the caret to quickly access your previously saved presets. Or tap the Save button to save a new preset using current settings. See Presets and Custom Presets topics for more information.
- **Mic Gain/Mute Button** Mic gain value is shown in decibels. Use the Mic Gain slider to manually adjust volume levels. Mute and unmute the mic input by tapping the Mute button.
- **Auto-Level** Auto-Level mode automatically adjusts gain applied to the microphone. Auto-level mode is optimized for speech recording. Toggle Auto-level off to control gain manually.
- **Tone** Adjust the tonal qualities of your audio by selecting Dark, Natural or Bright tone. Tone controls a variety of settings to quickly dial in the sound that works best for your voice.
- **XLR Phantom Power (+48V)** Toggle on phantom power when using a condenser microphone.

- **High Pass Filter** Choose no HPF for the most natural sound. Or select 75 Hz or 150 Hz to reduce wind noise, room and HVAC sound, or proximity effect.
 - **75 Hz Low frequency cutoff** Provides a 6 dB-per-octave cutoff at 75 Hz. Helps eliminate floor rumble and low-frequency room noise from heating and air conditioning systems. This setting may also be used to compensate for proximity effect or to reduce low frequencies that make an instrument sound dull or muddy.
 - **150 Hz Low frequency rolloff** Provides a 6 dB-per-octave rolloff filter at 150 Hz. Use this to compensate for proximity effect or to reduce low frequencies that could make an instrument sound dull or muddy.
- **Real-time Denoiser** Capture clean audio and significantly reduce the amount of unwanted noise in the signal caused by projectors, HVAC systems, or other environmental noise. This dynamic processor calculates the noise floor in less than desirable acoustic environments and removes noise throughout the entire spectrum with maximum transparency. Use in rooms with controlled acoustics and minimal echoes for the most natural speech sound.
- **Digital Popper Stopper** Use the Popper Stopper to remove harsh vocal plosives that can occur when we make sounds like “p” and “b”. This feature eliminates the need for a physical pop filter in front of the microphone.
- **Accessory Information** The model name, serial number and firmware version of the attached MOTIV device.
- **Check For Firmware Update** Tap the Check For Firmware Update button to find the latest firmware version and take advantage of additional features and design enhancements.
- **Reset to Defaults** Select Reset to Defaults to reset your device to factory settings. This will remove all effect changes you have made to the device.

Adjusting the Sound of Your Tone

The Tone slider allows you to quickly adjust the overall character of your sound. Use Tone to quickly make your voice sound darker, more natural, or brighter depending on your preference. A dark tone reduces higher frequencies for a warm, more full sound. Natural provides a balanced, uncolored sound. Bright enhances higher frequencies for added clarity and presence. Choose the setting that sounds best for your voice and listening environment.

Manual Device Settings

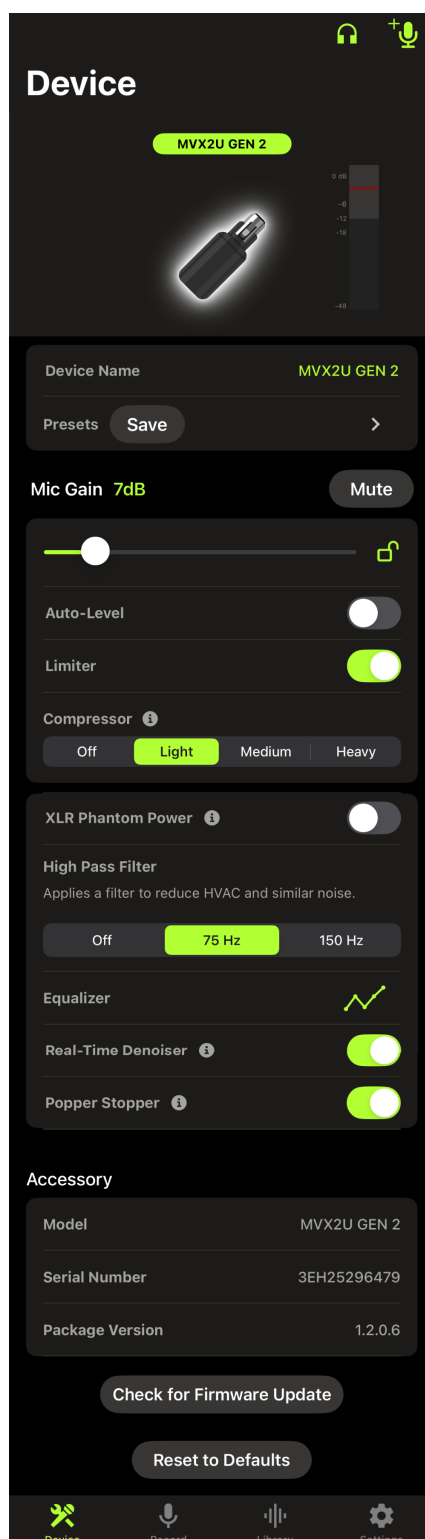

- **Presets** Tap the caret to quickly access your previously saved presets. Or tap the Save button to save a new preset using current settings. See Presets and Custom Presets topics for more information.
- **Mic Gain/Mute Button** Mic gain value is shown in decibels. Use the Mic Gain slider to manually adjust volume levels. Mute and unmute the mic input by tapping the Mute button.
- **Mute Lock** Tap the lock icon to ensure that the mic will remain muted or unmuted.

- **Auto-Level** Auto-Level mode automatically adjusts gain applied to the microphone. Auto-level mode is optimized for speech recording. Toggle Auto-level off to control gain manually.
- **Limiters** Toggle the limiter on to set an input threshold and prevent distortion from volume peaks in your recordings.
- **Compressor** Choose no compression, or select light, medium, or heavy compression to control volume when your sound source is dynamic. The compressor will narrow the dynamic range, which means that the volume is controlled by boosting quiet signals and lowering loud signals.
- **XLR Phantom Power (+48V)** Toggle on phantom power when using a condenser microphone.
- **High Pass Filter** Choose no HPF for the most natural sound. Or select 75 Hz or 150 Hz to reduce wind noise, room and HVAC sound, or proximity effect.
 - **75 Hz Low frequency cutoff** Provides a 6 dB-per-octave cutoff at 75 Hz. Helps eliminate floor rumble and low-frequency room noise from heating and air conditioning systems. This setting may also be used to compensate for proximity effect or to reduce low frequencies that make an instrument sound dull or muddy.
 - **150 Hz Low frequency rolloff** Provides a 6 dB-per-octave rolloff filter at 150 Hz. Use this to compensate for proximity effect or to reduce low frequencies that could make an instrument sound dull or muddy.
- **Equalizer** Change the preset modes to hear the DSP changes, and then use the equalizer to boost or cut bands of frequencies to improve sound clarity.
- **Real-time Denoiser** Capture clean audio and significantly reduce the amount of unwanted noise in the signal caused by projectors, HVAC systems, or other environmental noise. This dynamic processor calculates the noise floor in less than desirable acoustic environments and removes noise throughout the entire spectrum with maximum transparency. Use in rooms with controlled acoustics and minimal echoes for the most natural speech sound.
- **Digital Popper Stopper** Use the Popper Stopper to remove harsh vocal plosives that can occur when we make sounds like “p” and “b”. This feature eliminates the need for a physical pop filter in front of the microphone.
- **Accessory Information** The model name, serial number and firmware version of the attached MOTIV device.
- **Check For Firmware Update** Tap the Check For Firmware Update button to find the latest firmware version and take advantage of additional features and design enhancements.
- **Reset to Defaults** Select Reset to Defaults to reset your device to factory settings. This will remove all effect changes you have made to the device.

The MVX2U Gen 2 stores your last used processing settings, even when switching to other devices.

Advanced Mic Settings

After you have selected the preset mode for your application, fine tune the sound of your recording with limiter, compressor, and equalizer controls. Your settings will be retained in the microphone when using other audio and video recording applications.

Limiter

Toggle the limiter on to set an input threshold and prevent distortion from volume peaks in your recordings.

Compressor

Choose no compression, or select light or heavy compression to control volume when your sound source is dynamic. The compressor will narrow the dynamic range, which means that quiet signals are boosted and loud signals are lowered.

Wind Noise Reduction



Wind Noise Reduction engages a low-frequency cutoff filter that reduces rumble caused by environmental noise. Use the included foam windscreen in combination with wind reduction to counteract rumble and plosives (bursts of air hitting the microphone).

To further reduce wind noise, use the optional Rycote™ Windjammer, which fits over the included foam windscreen.

Left-Right Channel Swap



For stereo recordings, use Left - Right Swap to flip the left and right audio channels to match the stereo image to the video. For example, when using video to record yourself.

Tip: Use the L and R indicators on the microphone barrel. This way you can set Left - Right Swap before you start to record.

Equalizer (EQ)

First change the preset modes to hear the DSP changes, and then use the equalizer to boost or cut specific bands of frequencies to dial in the sound and improve clarity. EQ adjustments persist between preset mode changes.

Note: Equalization within presets will not be displayed. However, the equalizer graphic in the advanced settings status bar displays user-selected equalization.

Equalizer



Tap the EQ curve to access the equalizer. Equalization changes are displayed in the equalizer curve image.

Mounting Instructions

The MVX2U interface fits into a standard A25D mic clip. So you can place it anywhere that you can put a standing or tabletop mic stand.

The MOTIV Mix Recording App

Use the MVX2U with the Shure MOTIV Mix recording app for flexible control over microphone settings. MOTIV Mix allows you to record professional-quality audio with any microphone and provides up to 5 channels for recording, monitoring, mixing and streaming. It is ideal for close mic applications that require vocal intelligibility with a balanced tone. Customize your sound with DSP, gain control, compression, limiting, equalization and tone.

Features

- **Convenient Plug-and-Play Operation** Compatible with Windows and Mac computers.
- **Flexible Recording Control** The MOTIV Mix app manages up to 5 channels of audio for microphone settings, monitoring, recording and streaming.
 - Dark theme for low-light recording situations
 - Five band equalizer
 - Up to 8 hours of record time in 32-bit, 48kHz resolution

- **Virtual Audio Driver (VAD)** The Virtual Audio Driver (VAD) allows your computer to receive audio input from a variety of sources, like audio from music apps such as Apple Music and Spotify.

Quick Setup with MOTIV Mix

1. **Use the USB-C cable to connect a MOTIV device or microphone to your computer.**

The LED panel on the MOTIV device will pulse when the connection is made.

2. **Download the MOTIV Mix application at <http://www.shure.com/MOTIVMix>.**

Your computer may request permission to use the external device the first time the app is opened.


3. **Select your microphone from the Sources panel.**

Access customized controls for your MOTIV microphone via the settings gear icon  in MOTIV Mix.


Note: Choose whether MOTIV Mix launches during PC startup. Find this setting in Preferences > General or use the Task Manager to add MOTIV Mix.

Use MOTIV Mix in Compact or Full Mode

When you first open the application, you have the option of using it in Compact Mode or Full Mode. Full mode uses the full screen to access all of the features of MOTIV Mix as a multi-track recorder and mixer.

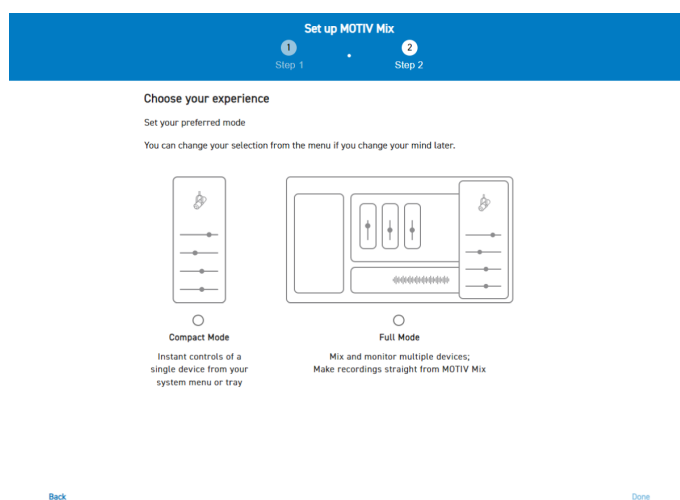

Compact mode allows you to use MOTIV Mix as a way to adjust single mic settings while taking up less screen space.

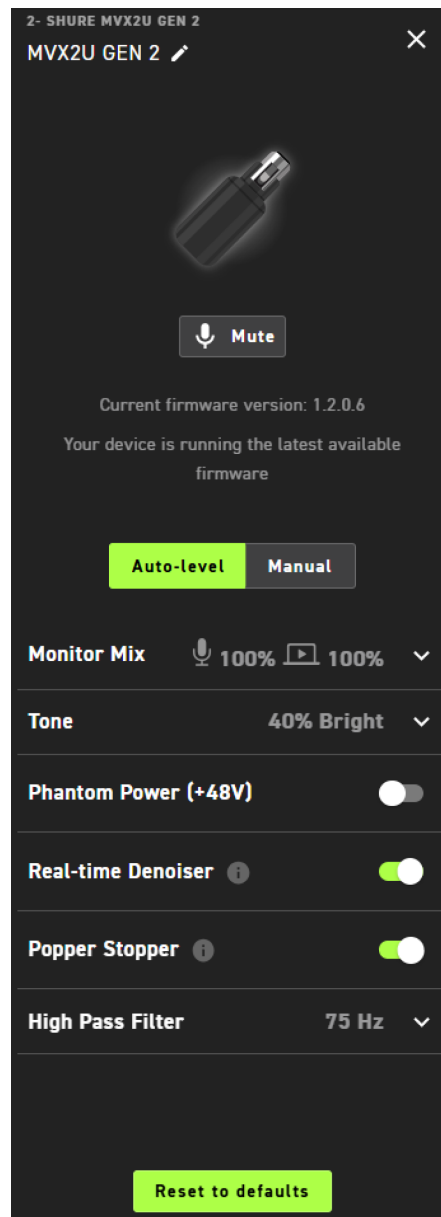


Users can also easily switch between Compact and Full modes by going to Windows menu option while in Full mode, or by clicking the (box w/arrow) icon while in Compact mode.

MOTIV Mix Layout

MOTIV Mix is divided into three main sections.



The Sources column where all available audio sources are listed.

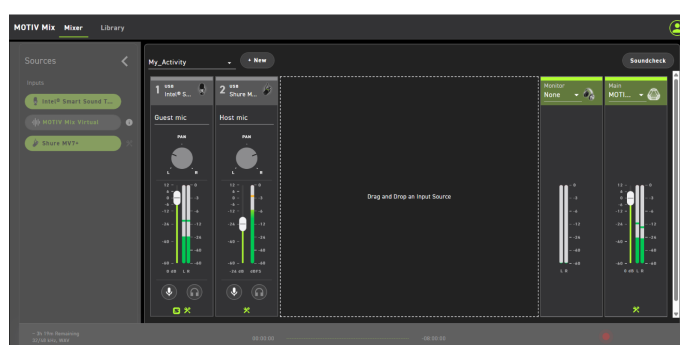

Drag and drop your audio sources into the Mixer to control levels of individual sources as well as the monitor and main volume levels.



The Recorder displays file information, a recording timeline and the Start/Stop record button.

Choose an Audio Output Mode

Use Audio Output Mode to select whether the audio output is mono or stereo and to map sound sources to left and right channels. Change your output mode in your mic device settings in Settings > Preferences > Output Mode.

Shure Virtual Audio (VAD)

The Shure Virtual Audio Driver creates a virtual audio device within the operating system that can be used to send and receive audio from a variety of sources into and out of MOTIV Mix. For example, route audio to this virtual sound card from the OS itself or from music apps such as Apple Music and Spotify into a VAD channel to use in your live stream or podcast. This audio

can then be mixed with audio from connected external sources, like USB microphones, USB interfaces and audio devices and then output to external speakers or a DAW or recording system. The VAD allows the mixing and routing of internal and external signals into and out of MOTIV Mix for mixing control across all audio sources.

Windows (virtual USB audio device):

1. In the Sources panel, tap MOTIV Mix to add the Virtual Audio Device input channel to the mixer.
2. Tap the Settings cog at the bottom right of this channel.
3. In the panel that appears, tap Open Sound Settings to open Windows Sound Settings.
4. In Windows Sound Settings, find the app audio source that you will use to route audio into MOTIV Mix. Assign the app output to MOTIV Mix Input from the drop down menu.

Audio from your selected app should be audible in MOTIV Mix.

Sending all computer audio to a MOTIV Mix input: Assign MOTIV Mix Input as your computer's audio output device. Windows Start menu > Settings > System > Sound > Output or tap the speaker icon in the taskbar and select MOTIV Mix Input. In MOTIV Mix, add the Virtual Audio Device (MOTIV Mix under Sources) to your Mixer.

Mac (Core Audio virtual device): Open System Preferences > Sound > Output and select MOTIV Mix. This will route all computer audio to the MOTIV Mix Virtual Audio Driver. If it isn't already in your Mix window, add the Virtual Audio Device (shown as MOTIV Mix under Sources) to your Mixer.

Note: If you find that you need to remove the Virtual Audio Driver, use the Uninstaller. Once the driver is uninstalled from the system, be sure to restart your computer before launching MOTIV Mix again to complete the process.


Using MOTIV Mix with your Mac and PC

MOTIV Mix comes with an audio driver and is compatible with most Mac or PCs. The software retains its last settings as configured.

Note: USB-A cable is not included.

Auto Level Device Settings

The MVX2U Gen 2 comes equipped with onboard digital signal processing (DSP) with zero-latency for any XLR mic. With the option to use Auto Level or Manual modes, you can change your mic settings to match your application. Auto Level mode automatically adjusts gain in the moment for clear, consistent, quality output. For more detailed control over your sound, use Manual mode to customize settings.

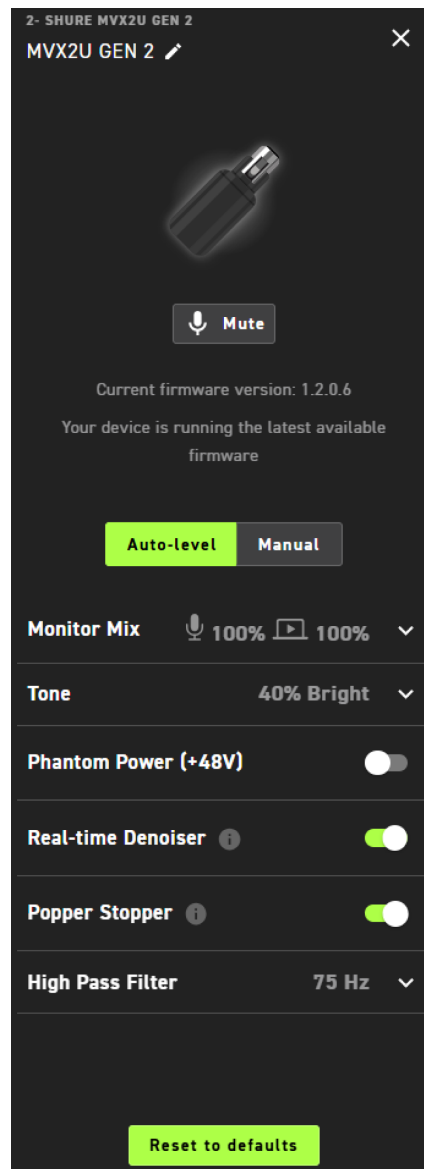

- **Presets** Tap the caret to quickly access your previously saved presets. Or tap the Save button to save a new preset using current settings. See Presets and Custom Presets topics for more information.
- **Mic Gain/Mute Button** Mic gain value is shown in decibels. Use the Mic Gain slider to manually adjust volume levels. Mute and unmute the mic input by tapping the Mute button.
- **Auto-Level** Auto-Level mode automatically adjusts gain applied to the microphone. Auto-level mode is optimized for speech recording. Toggle Auto-level off to control gain manually.
- **Tone** Adjust the tonal qualities of your audio by selecting Dark, Natural or Bright tone. Tone controls a variety of settings to quickly dial in the sound that works best for your voice.
- **XLR Phantom Power (+48V)** Toggle on phantom power when using a condenser microphone.
- **High Pass Filter** Choose no HPF for the most natural sound. Or select 75 Hz or 150 Hz to reduce wind noise, room and HVAC sound, or proximity effect.
 - **75 Hz Low frequency cutoff** Provides a 6 dB-per-octave cutoff at 75 Hz. Helps eliminate floor rumble and low-frequency room noise from heating and air conditioning systems. This setting may also be used to compensate for proximity effect or to reduce low frequencies that make an instrument sound dull or muddy.
 - **150 Hz Low frequency rolloff** Provides a 6 dB-per-octave rolloff filter at 150 Hz. Use this to compensate for proximity effect or to reduce low frequencies that could make an instrument sound dull or muddy.

-
- **Real-time Denoiser** Capture clean audio and significantly reduce the amount of unwanted noise in the signal caused by projectors, HVAC systems, or other environmental noise. This dynamic processor calculates the noise floor in less than desirable acoustic environments and removes noise throughout the entire spectrum with maximum transparency. Use in rooms with controlled acoustics and minimal echoes for the most natural speech sound.
 - **Digital Popper Stopper** Use the Popper Stopper to remove harsh vocal plosives that can occur when we make sounds like “p” and “b”. This feature eliminates the need for a physical pop filter in front of the microphone.
 - **Accessory Information** The model name, serial number and firmware version of the attached MOTIV device.
 - **Check For Firmware Update** Tap the Check For Firmware Update button to find the latest firmware version and take advantage of additional features and design enhancements.
 - **Reset to Defaults** Select Reset to Defaults to reset your device to factory settings. This will remove all effect changes you have made to the device.

Manual Device Settings

2- SHURE MVX2U GEN 2

MVX2U GEN 2



Mute

Current firmware version: 1.2.0.6
Your device is running the latest available firmware


Auto-levelManual

Monitor Mix  100%  100%

Mic Gain +8 dB

Equalizer Flat

-6.5 dB +0 dB -5.5 dB +0 dB +4.5 dB

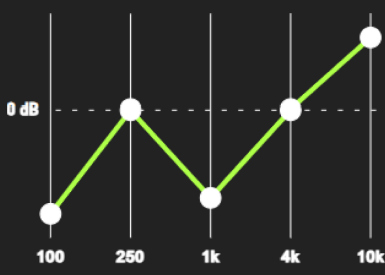

100 250 1k 4k 10k

Limiter ☒

Compressor  Light

Phantom Power (+48V) ☐

Real-time Denoiser  ☒

Popper Stopper  ☒

High Pass Filter 75 Hz

Reset to defaults

- **Presets** Tap the caret to quickly access your previously saved presets. Or tap the Save button to save a new preset using current settings. See Presets and Custom Presets topics for more information.
- **Mic Gain/Mute Button** Mic gain value is shown in decibels. Use the Mic Gain slider to manually adjust volume levels. Mute and unmute the mic input by tapping the Mute button.
- **Mute Lock** Tap the lock icon to ensure that the mic will remain muted or unmuted.
- **Auto-Level** Auto-Level mode automatically adjusts gain applied to the microphone. Auto-level mode is optimized for speech recording. Toggle Auto-level off to control gain manually.
- **Limiter** Toggle the limiter on to set an input threshold and prevent distortion from volume peaks in your recordings.
- **Compressor** Choose no compression, or select light, medium, or heavy compression to control volume when your sound source is dynamic. The compressor will narrow the dynamic range, which means that the volume is controlled by boosting quiet signals and lowering loud signals.
- **XLR Phantom Power (+48V)** Toggle on phantom power when using a condenser microphone.
- **High Pass Filter** Choose no HPF for the most natural sound. Or select 75 Hz or 150 Hz to reduce wind noise, room and HVAC sound, or proximity effect.
 - **75 Hz Low frequency cutoff** Provides a 6 dB-per-octave cutoff at 75 Hz. Helps eliminate floor rumble and low-frequency room noise from heating and air conditioning systems. This setting may also be used to compensate for proximity effect or to reduce low frequencies that make an instrument sound dull or muddy.
 - **150 Hz Low frequency rolloff** Provides a 6 dB-per-octave rolloff filter at 150 Hz. Use this to compensate for proximity effect or to reduce low frequencies that could make an instrument sound dull or muddy.
- **Equalizer** Change the preset modes to hear the DSP changes, and then use the equalizer to boost or cut bands of frequencies to improve sound clarity.
- **Real-time Denoiser** Capture clean audio and significantly reduce the amount of unwanted noise in the signal caused by projectors, HVAC systems, or other environmental noise. This dynamic processor calculates the noise floor in less than desirable acoustic environments and removes noise throughout the entire spectrum with maximum transparency. Use in rooms with controlled acoustics and minimal echoes for the most natural speech sound.
- **Digital Popper Stopper** Use the Popper Stopper to remove harsh vocal plosives that can occur when we make sounds like “p” and “b”. This feature eliminates the need for a physical pop filter in front of the microphone.
- **Accessory Information** The model name, serial number and firmware version of the attached MOTIV device.
- **Check For Firmware Update** Tap the Check For Firmware Update button to find the latest firmware version and take advantage of additional features and design enhancements.
- **Reset to Defaults** Select Reset to Defaults to reset your device to factory settings. This will remove all effect changes you have made to the device.

The MVX2U Gen 2 stores your last used processing settings, even when switching to other devices.

Your Recordings

When the recording is finished, the Recordings Saved confirmation will display the file location.

- Tap Show in Folder to open the default location of the recording folder. Or go to “Recorder Settings” for location information. Recordings are sorted by time and date.
- Access the recordings by using the date and time folder. If Main output only is selected in save preferences, there will be one main recording. If Main output + all individual sources is selected, the individual source recordings will appear with the main recording.

Save Preferences


MOTIV Mix will always save your main mix as a single recording, but you have the option to also save individual input sources as separate recordings.

1. **Main Output:** This will save the complete recording in a stereo file. This will save more space by saving a single file.
2. **Main Output plus individual tracks:** This is ideal when you have lots of memory available to save multiple files or when you might need to edit or process one track differently than the other.

You can always access your recording settings by going to the menu bar and selecting MOTIV Mix > Settings... > Recording settings. From here you can select how you are going to save files; Main output only or Main output and all individual sources. Use the save option that best suits your needs.

Soundcheck

The Soundcheck feature allows you to check your audio levels before you start recording. You will record about 10 seconds of audio and Soundcheck will give feedback and make suggestions to help with volume, distance and environmental noise. You then have the opportunity to make fixes to your recording settings and improve the quality of your recording. Ensure that you are using Soundcheck in Manual mode so that you can make adjustments, if needed.

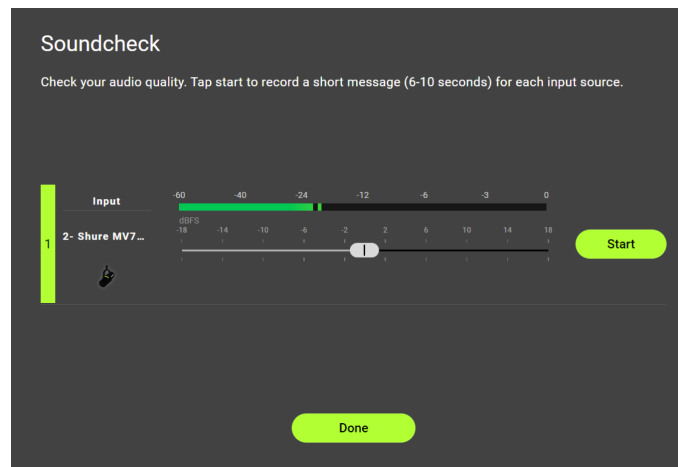

1. Tap the Soundcheck button in the upper right corner of the MOTIV Mix app.
2. The Soundcheck window displays an input meter and gain control. When you are ready, tap Start and a countdown to record will begin. Speak into the microphone.
3. Press the Play button to hear your recorded audio or Retry to begin again. The button will show a red status bar displaying remaining record time.
4. MOTIV Mix will make gain suggestions based on the recording levels.
5. Make adjustments as needed. Retry the test to ensure a strong signal.
6. You are ready to start recording. Tap Done to exit Soundcheck and return to the main record window.

Enhance

Enhance is a quick way to make recordings sound better and more suitable for sharing post-recording. By selecting one of the three levels, (low, medium, or high), you can automatically control loudness, and adjust compression and eq to improve the quality of your recordings.

Low	Best suited for speech recordings
Medium	Best suited for quiet musical content
High	Best suited for loud or amplified musical content

Using Enhance to Improve your Recordings

Go to the Library and right-click on your recorded file. Select Enhance and preview the changes made by the different enhance levels and normalization.

1. Place the playhead (red bar) where you would like the preview to start.
2. Tap Low, Medium and High to hear how your file changes with different enhance levels.

3. Select the level that sounds best and then Save. You can save the file or rename it to create a new file.

Note: Every time the file is changed, you will need to apply Enhance again to process the changed file.

How Does Enhance Work?

By selecting one of the three enhance levels (low, medium, high), a series of post production processing algorithms are applied that are responsive to your material. The amount of processing depends on the level that you have selected. Loudness, compression, soft and hard limiting are applied to all levels. Automatic equalization is applied to the medium and heavy enhance levels. Preview the levels and select the one that sounds the most natural sounding. Save the file with a new name or preserve the original track and create a new enhanced file with a new name.

Tip: Start by applying enhance to a single track. It will be faster to process each file individually. Also, different tracks will have different levels and tones. By processing one file at a time, you can be sure that enhance is getting the best sound out of each track.

Recording Tips

Control your Levels

To ensure consistent volume levels, determine the microphone placement that works best for you and maintain that distance. Record several practice tests to determine the spot where your voice sounds best and background sounds are minimized.

Find the Sweet Spot

Keep the microphone as close as possible (6 - 12 inches) to your mouth to avoid picking up unwanted room reflections and reverbation.

The point where the mic sounds best is often called the sweet spot. This is usually around 6 - 12 inches (15 - 30 cm) from your mouth.

Monitor Your Sound

To hear your audio with no latency, plug headphones into the headphone output on your MVX2U.

How to Avoid Plosives When Recording

Limit Device Types

For best results, record using devices of the same type. For example, using all USB mics is preferred to mixing USB mics, built-in mics and bluetooth devices in the same recording session.

Close Unused Apps

Limit the number of applications that are open while recording. Keeping multiple audio related applications open while recording in MOTIV Mix may result in recordings that are not in sync. We recommend having only MOTIV Mix open when recording for best results.

Keep equipment connected during updates

Keep the MOTIV device connected to your mobile device when updating to ensure that there are no update issues.

Mounting Instructions

The MVX2U interface fits into a standard A25D mic clip. So you can place it anywhere that you can put a standing or tabletop mic stand.

Troubleshooting

MOTIV Mix Troubleshooting

Issue	Solution
Microphone is plugged in, but not detected.	Unplug and reconnect the cable so that the app recognizes the microphone. You'll know that the connection is made when you see the desktop application display the correct microphone settings.
You hear no audio even though the desktop application is displaying the correct microphone.	Check the Monitor Mix blend. Move the Monitor Mix slider to the center to hear the audio going into the mic and the audio being played back at the same time.
Audio is distorted	If you are using a device with Auto Level Mode, Select Auto Level Mode to allow the software to control audio settings. Audio distortion usually comes from overloading the microphone which causes clipping. Lower your mic gain for the best sound recording.
"Device is in use by another application" error	Ensure that MOTIV App has been closed and uninstalled or that the Shure Update Utility is not running in the background. If the problem persists, try restarting your PC.
Audio sounds higher or lower pitch than normal.	Your microphone and computer have a sample rate mismatch. To adjust your computer sample rate settings, go to the Shure FAQ topic for information on correcting sample rate mismatch. MOTIV Mix sample rate is 48 kHz. Note: Windows update 10 v2004 (April 2020) solves this problem.
Miscellaneous issues	It may be useful to reset the app to restore functionality. Perform a hard reset by unplugging and re-plugging the microphone.
General troubleshooting	Quit and re-start the app. Reboot the computer. Check for firmware update. Tap the three dots in the top right corner and select About MOTIV > Check for Update

Note: We recommend completely uninstalling the MOTIV Desktop App before installing MOTIV Mix for the best experience. And contact Shure Service and Repair if you continue to experience any issues.

MVX2U Troubleshooting

Issue	Solution
Audio is distorted	Audio distortion usually comes from overloading the microphone which causes clipping. Lower your mic gain for the best sound recording. Check that the all cables are correctly and completely connected. If listening through headphones, check the connection or try using a different pair.
General troubleshooting	Disconnect and reconnect the MVX2U. Quit and re-start the app. Reboot the computer.

Note: Contact Shure Service and Repair if you continue to experience any issues.

Update Your Firmware

Take advantage of additional features and design enhancements by updating the app's firmware. When an update is available, a green dot will appear next to Firmware Update in the app settings menu. Follow the onscreen step-by-step instructions to update. The progress bar displays progress percentage and the process will include pauses.

1. The notification will let you know that a firmware update is available. You can also open the Settings tab to check for available updates.
2. You have the option to update immediately or update later.
3. View update progress so you know how much time is left in the update. You will receive a success or failure notification when the update is complete. If update is a failure, be sure to quit the app completely before attempting again. You may need to force quit the app to confirm that it isn't running in the background. Check connections, wait 5 minutes, and try again. Check the list below for tips on a successful update.

If you run into problems updating the firmware, new versions of the firmware can be uploaded and installed using the [Shure Update Utility](#).

For release notes and more details about releases, visit the [Software and Firmware Archive](#).

Tips to ensure a reliable update.

- Keep equipment connected during updates.
- Using the product or mobile device while downloading may slow or cancel the update process.
- Update requires a **minimum battery charge of 50%** on your mobile device.
- Approximate download time is **up to 30 minutes**.
- Do not exit the app and ensure that your screen is on.
- Do not update in areas with high volume mobile or WiFi wireless activity, like a plane or train station. This interference can significantly slow down or cancel the update process.
- Ensure that your mobile device is using the most current operating system (OS).

Contact Shure Service and Repair if you experience any issues.

Specifications

Frequency Response

20 Hz to 20,000 Hz

Input Impedance

(@ 1 kHz)

5.8 k Ω

Maximum Input Level

7 dBV

Digital Noise Floor (20 Hz to 20 kHz, A-Weighted)

-105 dBFS

Minimum MIC GAIN setting

0 dB

Maximum MIC GAIN setting

60 dB

Adjustable Gain Range

(0.5 dB/step)

0 dB to 60 dB

Headphone Output

3.5 mm (1/8 inch) 20 mW @ 32 Ω

Weight

100g (3.5 oz.)

MFi Certified

Yes

Housing

All metal construction

Power Requirements

Powered through USB connector

Phantom Power Supply

48V, 7 mA

Max. Current Draw through USB

160 mA

Operational Temperature Range

-5 to 40°C (23 to 104°F)

Storage Temperature Range
-29 to 74°C (-20 to 165°F)

Bit Depth	Sampling Rate
24 kHz	44.1 kHz
16 kHz	44.1 kHz
24 kHz	48 kHz
16 kHz	48 kHz

Accessories

Furnished Accessories

1 m USB-C to USB-C cable	95D52640
--------------------------	----------

Certifications

Conforms to electrical safety requirements based on IEC/EN 62368-1.

CE Notice

Hereby, Shure Incorporated declares that this product with CE Marking has been determined to be in compliance with European Union requirements.

The full text of the EU declaration of conformity is available at the following site: <https://www.shure.com/en-EU/support/declarations-of-conformity>.

UKCA Notice

Hereby, Shure Incorporated declares that this product with UKCA Marking has been determined to be in compliance with UKCA requirements.

The full text of the UK declaration of conformity is available at the following site: <https://www.shure.com/en-GB/support/declarations-of-conformity>.

This product meets the Essential Requirements of all relevant European directives and is eligible for CE marking.

Waste Electrical and Electronic Equipment (WEEE) Directive



In the European Union and the United Kingdom, this label indicates that this product should not be disposed of with household waste. It should be deposited at an appropriate facility to enable recovery and recycling.

Please consider the environment, electric products and packaging are part of regional recycling schemes and do not belong to regular household waste.

Registration, Evaluation, Authorization of Chemicals (REACH) Directive

REACH (Registration, Evaluation, Authorization of Chemicals) is the European Union (EU) and the United Kingdom (UK) chemical substances regulatory framework. Information on substances of very high concern contained in Shure products in a concentration above 0.1% weight over weight (w/w) is available upon request.

