

evo 4

Welcome to your new EVO 4 Audio Interface. Please read this quick guide to help get you started.

01

Connect

To connect your EVO 4 to your computer, simply plug in the USB cable provided. Once successfully connected, EVO 4's volume wheel LEDs will illuminate and perform a short animation followed by the Volume button illuminating.

02


Install Drivers

In order to start using your EVO 4 you will need to download and install the latest drivers, which can be found at evo.audio/evo4/downloads. Once the drivers are installed, you may be prompted to update the units firmware. A full installation guide can be found on our website.

03

The Features


1. Smartgain Mode
2. Inputs 1 + 2
3. Phantom Power
4. Volume knob
5. Monitor Mix
6. Output volume

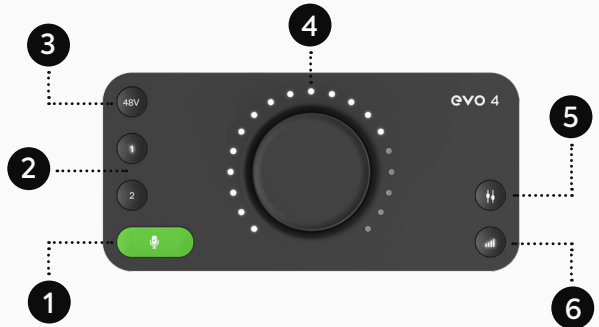






04 Smartgain Mode


- 1 Press the Smartgain button to begin



- 2 The Smartgain LED will illuminate green and the input channel LEDs (1 & 2) will begin to flash (indicating a channel must be selected)



- 3 Press one or more of the input channel buttons to select the channels to be adjusted


- 4 Press the Smartgain button again to begin the process


- 5 The Smartgain LED will start flashing red and the volume wheel LED's will illuminate indicating that Smartgain Mode is now listening


- 6 Start playing or performing into the microphone


- 7 Smartgain Mode will dial in the correct levels and when complete the Smartgain button will flash green twice to indicate it has been successful


- 8 You are now ready to start recording

