


ORANGE[®] O BONES

WIRELESS HEADPHONES

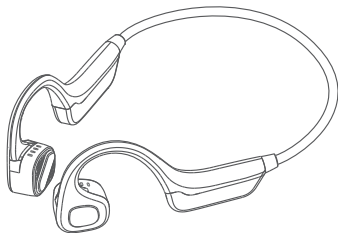


Thank you for purchasing Orange O Bones.
Please read this guide carefully before using.

PACKAGE CONTENTS



O Bones






USB - C
Charging Cable




User's Guide

HOW TO PAIR

1. Press and hold the MFB for 3 secs to power on and enter the pairing mode, the indicator will flash red and blue, with voice prompt "**power on**".
2. Turn on **Bluetooth** in the **settings** of your device, search for **Orange O-Bones** in the pairing list and click to pair. The indicator on the **O Bones** will go out when paired successfully and voice prompt will say "your headset is connected".

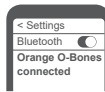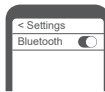

FUNCTIONS

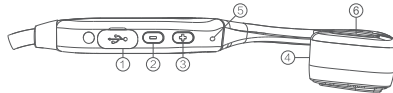

① TYPE-C CHARGING PORT

When the battery is low, the red light blinks and a "Low battery" voice prompt will play. When not in use the O Bones automatically power down.

② VOLUME DOWN

SHORT PRESS = Volume down
2 SEC HOLD = Previous song

③ VOLUME UP

SHORT PRESS = Volume up
2 SEC HOLD = Next song

④ MICROPHONE

For hands-free calls

⑤ LED INDICATOR (CHARGING)

Operation	Indicator
Charging	Red light on
Fully charged	Blue light on
Low battery	Flash fast in red

LED INDICATOR (MFB)

Operation	Time	Indicator
Power on & Pair	3 secs	Flash Red & Blue
Power off	5 secs	Flash Red

⑥ MULTI FUNCTION BUTTON (MFB)

PRESS = Play / Pause / Answer / End call
HOLD (3 SEC) = On and pairing
HOLD (5 SEC) = Off
PRESS TWICE = Voice assistant

PRODUCT SPECIFICATIONS

BLUETOOTH: V5.0+EDR
SUPPORT MODEL: HSP / HFP / A2DP / AVRCP
BATTERY CAPACITY: 3.7V / 180 MAH
PLAYING TIME: 8 HOURS
CHARGING TIME: 2 HOURS
WORKING DISTANCE: 10 M
FCC ID: 2A3TF-O-BONES

FAULT DIAGNOSIS SOLUTIONS

FAULT	PROBLEM	SOLUTION
Failed to turn on	Possibly no battery charge	Charge O Bones
Failed to automatically reconnect	Standby mode	Double click MFB or restart
Failed to find O Bones On device	Not in Pairing mode	Power off, then power back on (3 sec MFB)

STORAGE AND MAINTENANCE

- Please store the O Bones in a cool, dry place.
- When stored for a long period of time, please charge before using.
- The O Bones are water resistant but not waterproof, do not submerge in water.
- Please use a soft, dry cloth to clean the O Bones.
- Do not charge the O Bones in a moist or wet environment.
- Do not leave the O Bones in very high or low temperatures.